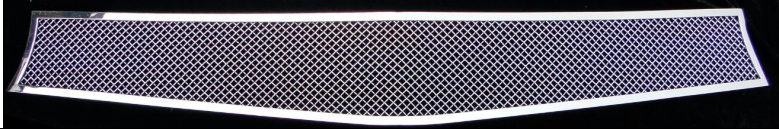
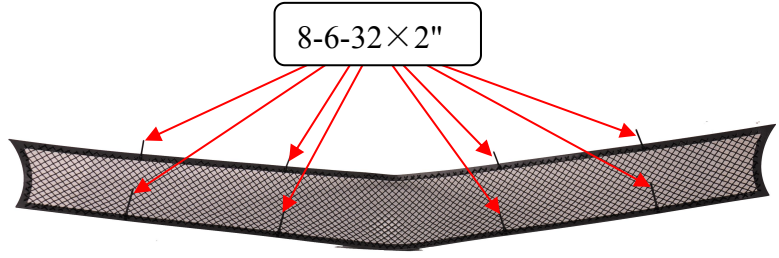
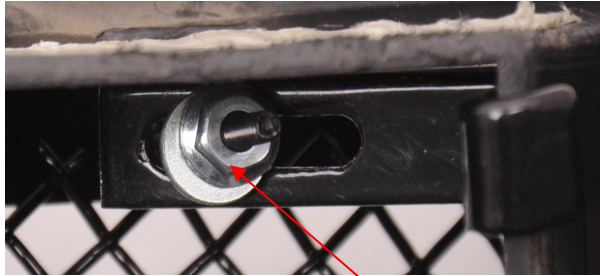


Part#	GR03GFG20H	Application	2010-2012 Chevy Camaro LT/ LS/ RS/SS Long Main Upper
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Tab 1	4	/
	2	Stud	8	6-32×2"	5	Tab 2	4	/
	3	Lock Nut	8	6-32	6	Washer	8	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Secure the stud to the threaded holes on the rear of the grille.	
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	N/A
5	Secure grille using the tabs and lock nuts and washers from the back side of the OEM grille shell.	 <div style="border: 1px solid black; padding: 2px; display: inline-block;">Washer and Lock Nut</div>
6	Make sure the grille is centered and tighten the fasteners.	N/A
7	Reinstall the black plastic cover which was removed in step 1.	N/A
8	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!