

Part#	GR03HAJ3 4J	Application	FOR 1978-1981 Chevy Camaro
-------	----------------	-------------	----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Kept Nut	4	6#
2	Thread stud	4	6#× 1.5 "	4	Z bracket	4		

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	Thread the studs into the thread holes on the rear of the billet grille.	<p>4 thread holes on the rear of the billet grille</p>
3	Fasten the Z brackets on the rear of the billet grille with the studs & kept nuts.	<p>Z bracket, stud & nut</p>
4	Remove the OEM plastic grille by unfastening the OEM screws. And set aside the OEM screws, the screws will be reused.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03HAJ3 4J	Application	FOR 1978-1981 Chevy Camaro
5	<p>Identify the 4 holes & U-clip on OEM plastic cross plate at both sides of the opening. Note: If necessary, center the billet grille into the opening market & drill $1/8\text{ i} \pm$ holes onto the plastic cross plate according to the positions of the Z bracket holes.</p>	<p>4 holes & U-clips position</p>	
6	<p>Center the billet grille (with Z brackets) onto the opening and secure the billet grille with the OEM screws & u-clips, which were removed on step4.</p>	<p>Front</p> <p>Inert the OEM screw through the gap between the billets from front side</p> <p>Rear</p> <p>Z bracket, OEM screw & U-clip</p> <p>Plastic cross plate on opening</p>	
7	<p>Installation completed!!!</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!


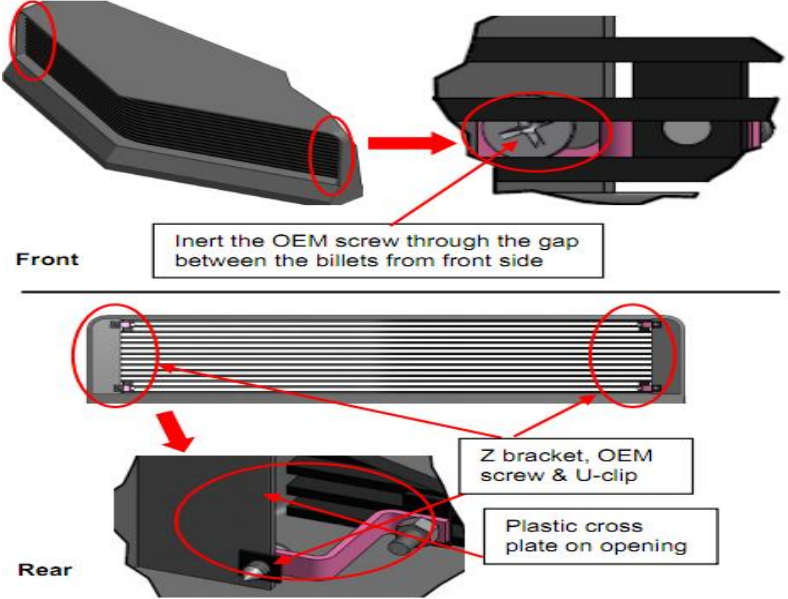

Part#	GR03HAJ3 4J	Application	FOR 1978-1981 Chevy Camaro Lower Bumper				
-------	----------------	-------------	---	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Kept Nut	3	6#
2	Thread stud	3	6#× 1.5 "	4	Z bracket	3		

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	Thread the studs into the thread holes on the rear of the billet grille.	<p>4 thread holes on the rear of the billet grille</p>
3	Fasten the Z brackets on the rear of the billet grille with the studs & kept nuts.	<p>Z bracket, stud & nut</p>
4	Remove the OEM plastic grille by unfastening the OEM screws. And set aside the OEM screws, the screws will be reused.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03HAJ3 4J	Application	FOR 1978-1981 Chevy Camaro Lower Bumper
5	<p>Identify the 4 holes & U-clip on OEM plastic cross plate at both sides of the opening. Note: If necessary, center the billet grille into the opening market & drill $1/8\text{ i} \pm$ holes onto the plastic cross plate according to the positions of the Z bracket holes.</p>	 <p>4 holes & U-clips position</p>	
6	<p>Center the billet grille (with Z brackets) onto the opening and secure the billet grille with the OEM screws & u-clips, which were removed on step4.</p>	 <p>Front</p> <p>Inert the OEM screw through the gap between the billets from front side</p> <p>Rear</p> <p>Z bracket, OEM screw & U-clip</p> <p>Plastic cross plate on opening</p>	
7	<p>Installation completed!!!</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!