



# PATENT PRODUCT


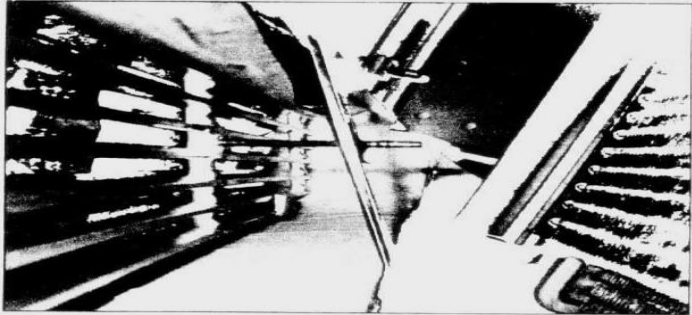
## Grille Installation Instruction

Rev. 180401

<b>Part#</b>	GR03HEB13C/J	<b>Application</b>	<b>For 2006-2011 Chevy HHR Not For SS model</b>
--------------	--------------	--------------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Machine Screws	2	6-32×2"
2	U-Nuts	2	6#	4	Flange Bracket w/ 1/2" Offset Hole	2		

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Test fit the grille in place. Slide a u-nut onto both flange brackets.	
4	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
5	Secure billet grille using the Screws from the back side of the OEM grille shell.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!