
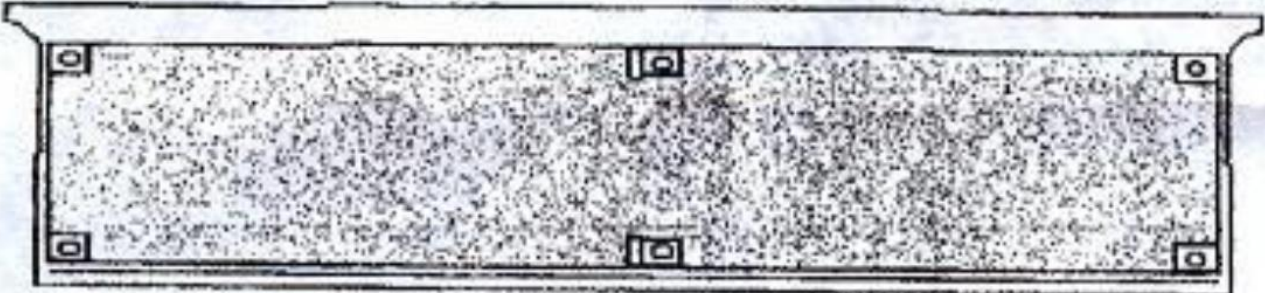


| | | | |
|-------|------------|-------------|---|
| Part# | GR03HEB47S | Application | For 1982-1987 Chevy EL Camino For 1982-1983 Chevy Malibu |
|-------|------------|-------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-----------------|------|---------------------------|-----|-------------|
| | 1 | Billet Grille | 1 | Stainless steel | 3 | Truss Head Tapping Screws | 8 | 8# × 3/4" |
| | 2 | U-Clip Nuts | 8 | 8# | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Remove the grille shell from vehicle. | |
| 3 | Use a die grinder or an alternative tool to cut out the inner grille work out. Make your cuts close to the inner edge (where the bars are molded to the main grille). Do not cut the six mounting tabs use to secure the grille to the vehicle. File or sand any rough edges smooth. When finished the grille should look like the diagram below. The shaded area illustrates what material needs to be removed. |  |
| 4 | Center the billet insert in the grille. Hold the billet insert firmly in place; Mark each mounting tab hole to the grille shell. Drill a 1/8" hole at each mark. | |
| 5 | Secure the billet insert to the shell using the screws and nuts. Before fastening the billet, a light coat of matt black spray paint can be applied to the inner area of the factory grille to hide the sanded and cut areas. | |
| 6 | Make sure the billet grille is centered and tighten the fasteners.but do not over-tighten. | |
| 7 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!