



PATENT PRODUCT


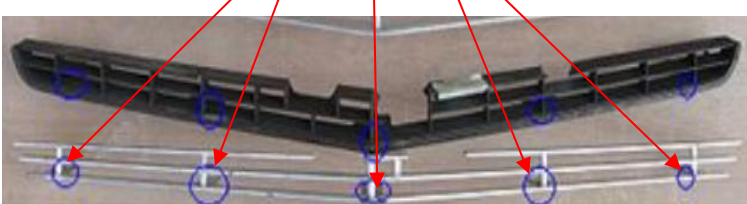
Grille Installation Instruction

Rev. 150114

Part#	GR03HEB51A	Application	1974-1977 Chevy Camaro Z28
--------------	------------	--------------------	----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	3Billets	2	/	/	/

Install Notes:
 Overlay
 Replacement
 Drill
 Cut

Step	Description	illustration
1	Identify the grille with parts list. & hardware (Original Factory)	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	N/A
4	Secure billet grille using the Original Factory Fasteners from the back side of the OEM grille shell.	<div style="text-align: center; border: 1px solid black; padding: 5px; margin-bottom: 10px;">Fasteners</div> 
5	Make sure the billet grille is centered and tighten the fasteners.	N/A
6	Reinstall the black plastic cover which was removed in step 1.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!