



PATENT PRODUCT


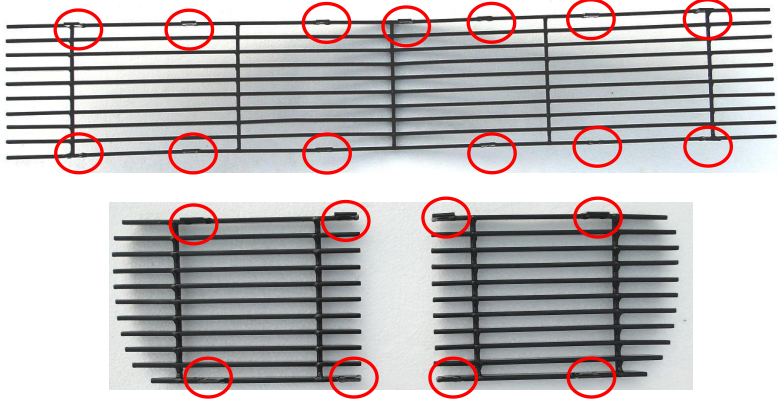
Grille Installation Instruction

Rev. 20200701

Part#	C85252C&J&S	Application	For 1967-1968 Chevy Camaro RS
--------------	-------------	--------------------	-------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Screws	21	6-32X1"
	#2	Kept Nuts	21	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop Hood, remove plastic shroud at the top and set fasteners aside.	
3	Position the Billet Grille onto grille shell cavity.	
4	Make the mark on the grille shell through the billet grille holes and drill holes at these marked locations	
5	Reposition the billet grille and loosely attach the Billet Grille to the grille shell by inserting the Screws (from the front) through the Billet Grille holes and shell holes, secure them with Nuts provided.	
6	Once the Billet Grille are loosely attached, center them and tighten all screws at the same rate.	
7	Make sure the insert is centered and tighten the hardware.	
8	Reinstall the plastic shroud with the fasteners removed in Step 2.	
9	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!