

3

4

8

PATENT PRODUCT

Grille Installation Instruction

For 1969-1972 Chevy Blazer/Chevy C/K Pickun/Chevy

Flat Tab

Flat Tab

Screw

Grille Shell

U Clip

U Clip

Rev. 180401

Part#	# GR03HEJ03C/J		Application		Suburban					
		Item	Part Nam	e QTY	Y Description		Item	Part Name	QTY	Description
Parts Li	ict	1	Billet Grille	1	Stainless steel		4	Cross Head Tapping Screws	10	10#x1"
	ısı	2	2 Z Bracket				5	U-Clip Nuts	10	10#
		3	Flat Tab	3	With 2 I	noles				
Install Notes: Overlay										
Step	Description						illustration			
1	Identify the grille & hardware with parts list.						1			
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.									

5 Remove the outer two, of the four plastic clips on top of the grille area.

Place U-clip on one end of each of the three Tabs


Install the three Tabs on the grille shell using the

in three places of the grille shell.

supplied screws.

Installation completed!!!

as shown. Also install U-clip on the lower grille area

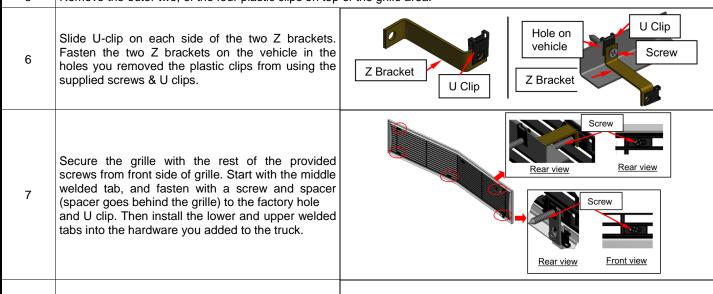

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!