
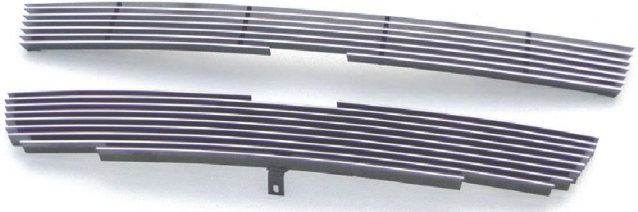
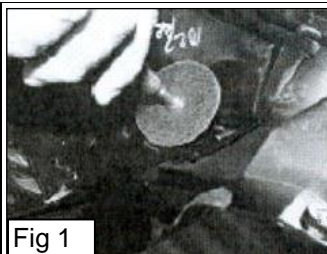
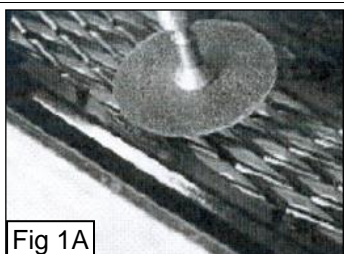


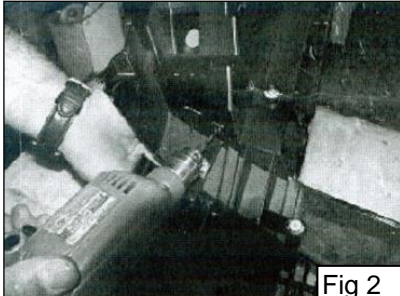

Part#	GR03HFG99A/H	Application	For 2004-2010 Chevy Colorado Xtreme
-------	--------------	-------------	-------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	8	Bolts	2	1/4" -20×3/4"
	2	Bolts	10	10-24X1"	9	Nuts	2	1/4" -20
	3	K-Lock Nuts	10	10-24	10	2-Holes Tabs	4	
	4	'U' Clips	5		11	Washers	2	
	5	Phillip Screws	5	#8×3/4"	12	'L' Bracket	2	
	6	'L' Bracket	1		13	'L' Bracket	1	
	7	'L' Bracket	1		14	'L' Bracket	1	

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Tape off the grille shell so you do not scratch during the installation.	
4	Using a pneumatic cutting tool or hand tool grind down the heat seal tabs to remove the honeycomb section of the grille shell. Once the honeycomb section has been removed carefully ,you can grind down the rest of each heat seal tab.(See Figure 1)	 
5	Next attach two brackets to each of the sides of the billet grilles, and two to the top of the upper grille.(See Figure 2&3). The Longer brackets go on the upper grille and the shorter bracekets on the lower grille.	
6	Center the inserts, then mark and drill your holes.(See Figure 2)	 

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03HFG99A/H	Application	For 2004-2010 Chevy Colorado Xtreme
7	The lower grille has one bracket on the lower portion of the grille, mark and drill this hole and secure with a screw(See Figure 4)		
8	Reinstall the grille shell and billet back onto the vehicle, then secure the upper brackets to the core support.		
9	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!