
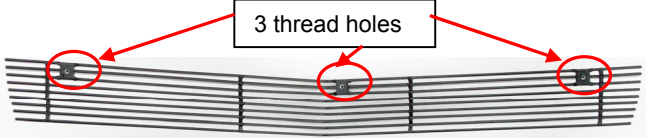
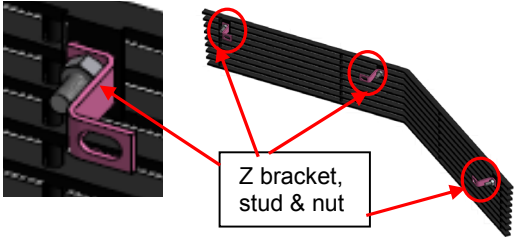






# PATENT PRODUCT

## Grille Installation Instruction

Rev. 140401

<b>Part#</b>	GR03HFH44C	<b>Application</b>	1978-1981 Chevy Camaro Lower Bumper					
<b>Parts List</b>	<b>Item</b>	<b>Part Name</b>	<b>QTY</b>	<b>Description</b>	<b>Item</b>	<b>Part Name</b>	<b>QTY</b>	<b>Description</b>
	1	Billet Grille	1	9 Billets	3	Kept Nut	3	#10
	2	Thread stud	3	#10-24 × 1 1/4"	4	Z bracket	3	
<b>Install Notes:</b> Overlay <input type="checkbox"/> Replacement <input checked="" type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
<b>Step</b>	<b>Description</b>				<b>illustration</b>			
1	Identify the grille & hardware with parts list.							
2	Thread the studs into the thread holes on the rear of the billet grille.							
3	Fasten the Z brackets on the rear of the billet grille with the studs & kept nuts.							
4	Remove the OEM plastic grille by unfastening the OEM screws. And set aside the OEM screws, the screws will be reused. <b>Note:</b> If necessary, remove the upper OEM grille too, which will allow to reach the rear of the bumper grille for installation.							
5	Identify the position of 3 holes & U-clip on OEM opening. <b>Note:</b> If necessary, center the billet grille into the opening market & drill 1/8" holes onto the plastic cross plate according to the positions of the Z bracket holes.							

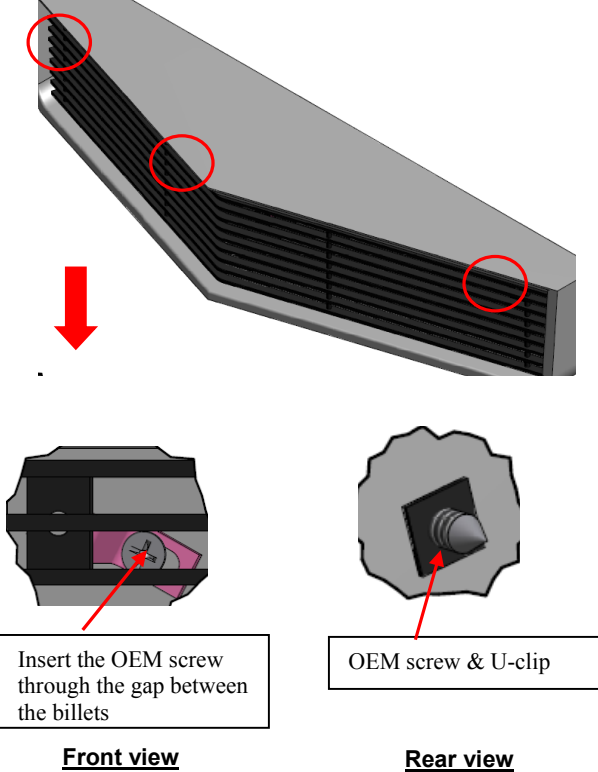

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



# PATENT PRODUCT

## Grille Installation Instruction

Rev. 140401

Part#	GR03HFH44C	Application	1978-1981 Chevy Camaro Lower Bumper
Step	Description	illustration	
6	Center the billet grille (with Z brackets) onto the opening and secure the billet grille onto the plastic plate behind the billet grill with the OEM screws & u-clips, which were removed on step4.	 <p data-bbox="762 1151 1031 1240">Insert the OEM screw through the gap between the billets</p> <p data-bbox="1091 1151 1362 1205">OEM screw &amp; U-clip</p> <p data-bbox="823 1256 943 1285"><b>Front view</b></p> <p data-bbox="1166 1256 1286 1285"><b>Rear view</b></p>	
7	<b>Installation completed!!!</b>		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!