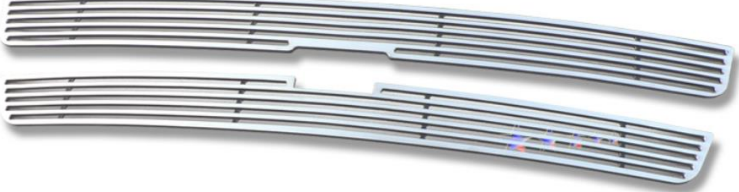


Part#	GR03IEG01A/H	<i>Application</i>	For 1999-2002 Chevy Silverado 1500/1500HD / 2000-2006 Chevy Suburban / 2000-2006 Chevy Tahoe / 1999-2000 Chevy Silverado 2500/2500HD/3500
--------------	--------------	--------------------	---

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Perimeter Grille	2	Aluminum	3	K-Lock Nuts	8	6-32
	2	Flat Tabs	4		4	Studs	8	6-32 × 1 1/2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the plastic filler panel from the top of the radiator support.	N/A
3	Remove grilles from box and test fit the grilles first to identify the top grille from the bottom grille. They will only fit in one direction correctly.	N/A
4	Now thread studs into the grille using a slotted screwdriver. Then push the studs through the grid of the shell and center the grille into the opening. Fasten the grille use the tabs and the k-lock nuts from the rear, but do not over-tighten.	N/A
5	Make sure the grille is centered.	N/A
6	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!