



# PATENT PRODUCT

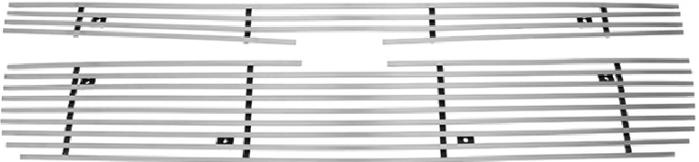
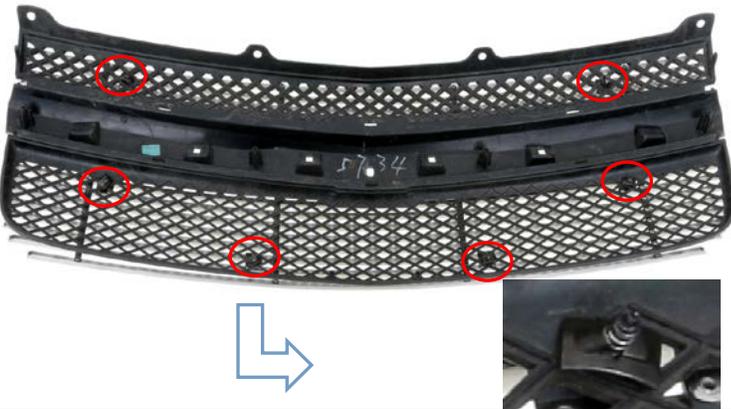
## Grille Installation Instruction

Rev. 190501

<b>Part#</b>	GR03IEG34C/S/J	<b>Application</b>	For 2005-2009 Chevy Equinox
--------------	----------------	--------------------	-----------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	2	Stainless steel	3	Truss Socket Tapping Screws	6	8×1"
	2	Flat Nut	6	8#				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Hold the grille against the OEM grille shell, and make sure that it is centered. Place screws through welded aluminum tabs on front of the grille.	
4	Secure the grille using the flat nut from the back side of the OEM grille shell.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!