



# PATENT PRODUCT

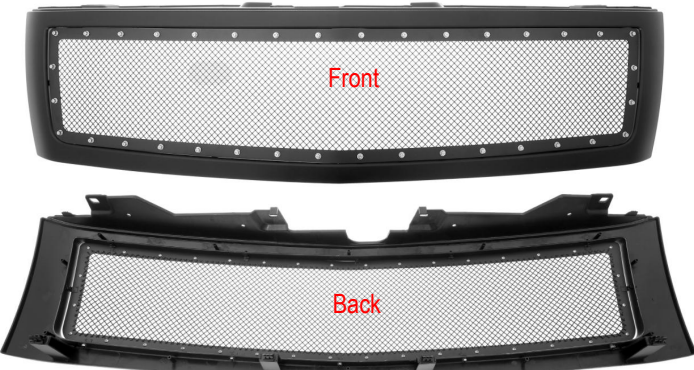


## Grille Installation Instruction

Rev. 20230201

<b>Part#</b>	CL5766P	<b>Application</b>	For 2007-2013 Chevy Silverado 1500 (only for models with logo height exceeding center bar)
--------------	---------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Mesh Grille	1	Black Powder Coated SS.				

Install Notes: **Overlay**  **Replacement**  **Drill**  **Cut**

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Using a plastic clip removal tool or similar tool locate and remove 10 factory clips holding the radiator shroud. Remove plastic radiator shroud from vehicle. Set shroud and hardware aside for re-installation.	
3	Open vehicles hood. Using a 10mm socket locate and remove 4 bolts circled above. Set hardware aside for re-installation.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation.  
Thank you for choosing our product!

Part#	CL5766P	Application	For 2007-2013 Chevy Silverado 1500 (only for models with logo height exceeding center bar)
4		<p>The grille has six metal clips (fig1) that clip into the core support two behind the Chevy logo and four along the bottom. Pull the grille forward; use a pair of pliers to release the clips (fig 2).</p>	
5		<p>Firmly grab and pull factory grille off of vehicle. Discard factory grille.</p>	
6		<p>Place Mesh grille onto vehicle. Install the grille onto vehicle by reversing steps 2-3.</p>	
7		<p>Installation completed.</p>	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation.  
Thank you for choosing our product!