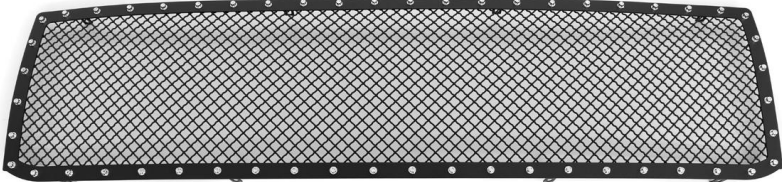



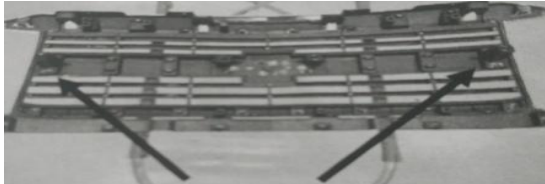
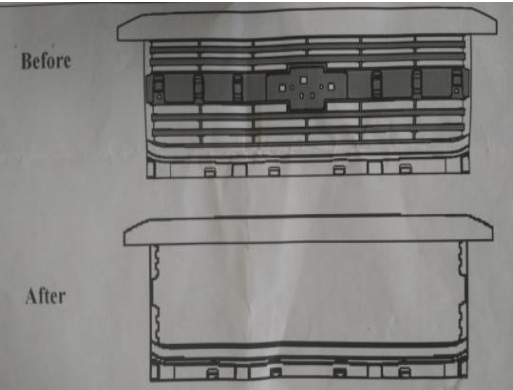


Part#	<b>GR03LFC33K</b>	Application	<b>2015-2016 Chevy 2500HD/3500HD Main Upper</b>
-------	-------------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1			3	Lock Nuts	8
2	bolt	8	1/4 " -20×1 1/2 "		4	washer	16	1/4 "

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	You may need to remove the black plastic cover (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove plastic cover by removing 12 retaining clips with flat head screw driver(locations shown above)	
4	Once cover is removed,remove the top 4 grille screws with 10mm wrench	
5	Remove grille by pulling grille forward away from the truck	
6	Remove(2) 7mm bolts (locations shown above) from back of grille. Unclip chrome tabs and bowtie tabs(use flat head screw driver). Tack bowtie and middle chrome section of	
7	Use saw to cut inner section of grille out(shaded area below)	
8	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	
9	Make sure the grille is centered and tighten the fasteners.	
10	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!