
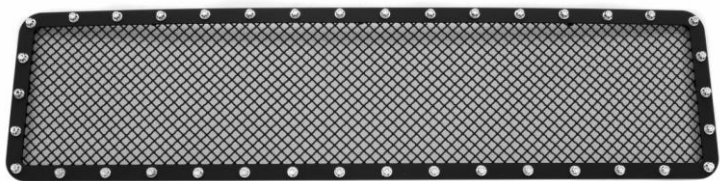
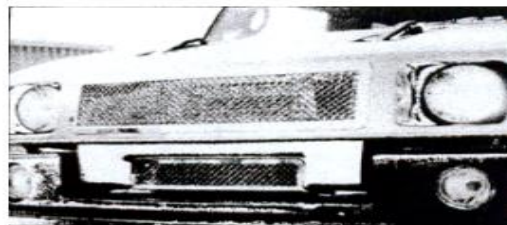


Part#	GR03LFE79 H	Application	03~06 Hummer H2 – Main Upper Stainless Steel Mesh Grille
-------	----------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Flange Brackets	8	
	2	Washers	8		5	Nylon Lock Nuts	8	10-24
	3	Studs	8	10-24×2"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood and remove the grille. Place the grille face up on a work-table. The six chrome vertical bars in the center of the grille must be cut from the grille. The billet has a large perimeter that will cover your cuts. Apply a strip of masking tape along the top and bottom of the grille; approximately 7 1/4" apart. Make the two cuts along the top and bottom from the front. Test fit the billet in place. Now cut the remaining plastic from the back of the grille; make your cut approximately 1/4" from the back of the grille. This will leave a small lip around the back of the grille.	
3	File or sand your cuts smooth. Center the grille; Thread a stud in each nut welded to the grille. Install a washer, flange and nut onto each stud. Tighten the nuts until the grille is held in place.	
4	Make sure the grille is centered and tighten the fasteners. but do not over-tighten.	
5	Reinstall the black plastic cover which was removed in step 2.	
6	Installation completed!!!	

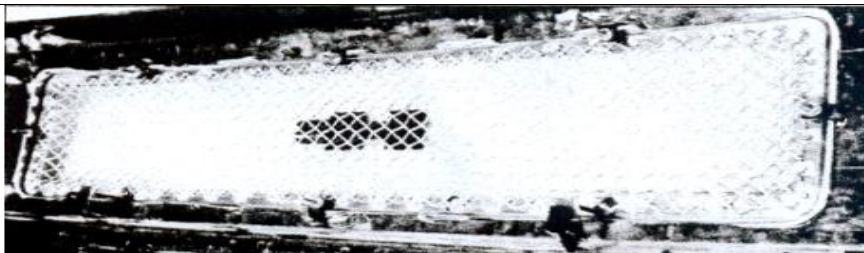

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!