
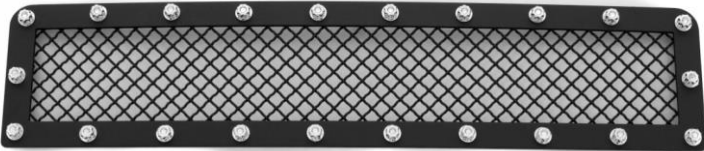
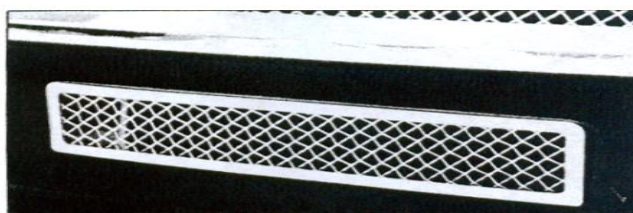


Part#	GR03LF E80H	Application	03~06 Hummer H2 – Low Bumper Stainless Steel Mesh Grille
-------	----------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	L Brackets	3	1/2" × 1/2"
	2	Studs	3	10-24 × 1"	5	Washers	3	
	3	Keyp Nuts	3	10-24				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood and remove the grille. Place the grille face up on a work-table. Apply masking tape to the grille.	
3	Cut the molded plastic with holes from the grille. Make your cut about 1/8" inside the parting line around this area (this is necessary to hold the grille in place). We recommend cutting less rather than more; if too much material is cut, the grille will not secure properly. Test fit the grille into the opening. Remove more material if necessary.	
4	Center the grille into the bumper opening; the plastic should overlap the sides of the grille. Thread a stud in each nut welded to the grille. Attach the L brackets to the top and end mounting studs using the nylon lock nuts; these wrap around plastic edge of the cut the bumper opening. Do not over tighten the L brackets.	
5	Make sure the grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

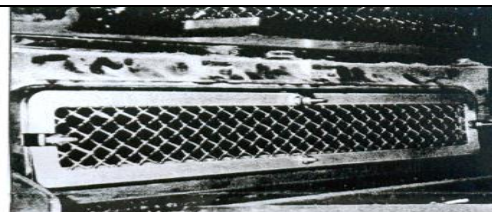

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!