



PATENT PRODUCT

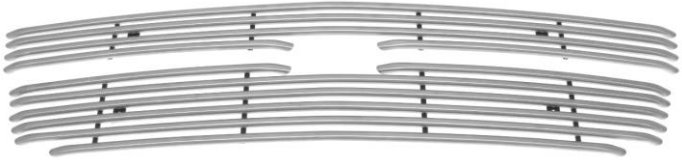
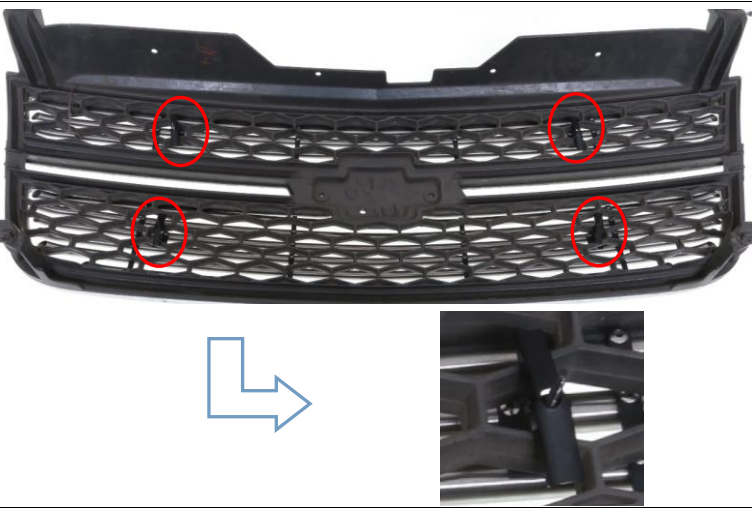
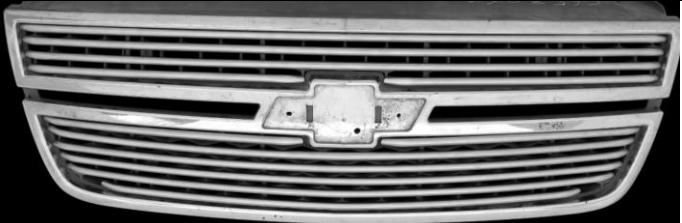
Grille Installation Instruction

Rev. 180901

Part#	GR03TEC06C/J	<i>Application</i>	For 2007-2007 Chevy Silverado 1500/2500 HD / 3500 Classic Style / 2005-2006 Chevy Silverado 3500 / 2006-2006 Chevy Silverado 1500 /1500 HD /1500 SS / 2500 HD
--------------	--------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	2	Stainless steel	3	Truss Head Screws	4	6-32×2"
	2	Toggle Nuts	4	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Place screws through the welded aluminum tabs on the grille. Hold the billet grille up to the opening of the factory shell. Thread in the toggle nut from the back of OEM grille honeycomb.	
4	Turn the toggle nut so that it is vertical, and tighten. But not over-tighten.	
5	Reinstall the black plastic cover which was removed in Step 2.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!