
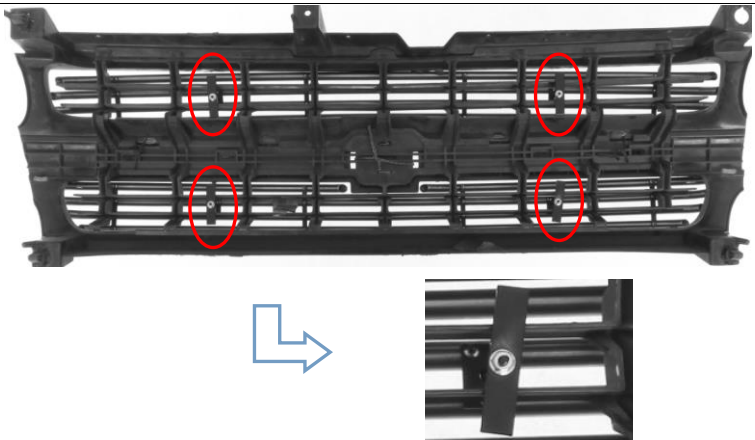



|              |                    |                    |  |
|--------------|--------------------|--------------------|--|
| <b>Part#</b> | GR03TEG01<br>C/S/J | <i>Application</i> | <b>For 1999-2002 Chevy Silverado 1500/1500HD /<br/>2000-2006 Chevy Suburban /<br/>2000-2006 Chevy Tahoe /<br/>1999-2000 Chevy Silverado 2500/2500HD/3500</b> |
|--------------|--------------------|--------------------|--|

| Parts List | Item | Part Name     | QTY | Description     | Item | Part Name                 | QTY | Description |
|------------|------|---------------|-----|-----------------|------|---------------------------|-----|-------------|
|            | 1    | Billet Grille | 2   | Stainless steel | 3    | Nylon Lock Nuts           | 4   | 6-32        |
|            | 2    | Flat Tabs     | 4   | 6#              | 4    | Truss Head Tapping Screws | 4   | 6×2"        |

**Install Notes:** Overlay  Replacement  Drill  Cut

| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the grille & hardware with parts list.   |    |
| 2    | Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. |  |
| 3    | Center the billet grille into the opening of the factory grille shell. Secure the bolt to the holes on the front of the grille. Be sure the bolts are through the OEM grille shell.   |  |
| 4    | Secure billet grille using the tabs and nylon lock nuts from the back side of the OEM grille shell.   |  |
| 5    | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.   |  |
| 6    | Reinstall the black plastic cover which was removed in step 2.  |  |
| 7    | Installation completed!!!   |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!