



# PATENT PRODUCT

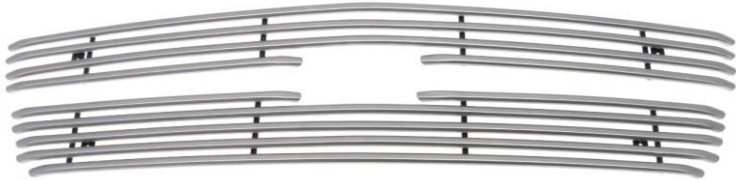
## Grille Installation Instruction

Rev. 180901

<b>Part#</b>	GR03TEG02C/J	<b>Application</b>	For 2001-2002 Chevy Silverado 2500 / 3500
--------------	--------------	--------------------	---

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	2	Stainless steel	3	Truss Head Screws	4	6-32x2"
	2	Toggle Nuts	4	6#				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Place one screw through each of the welded tabs on the billet grilles. (Test fit the grilles first to identify the top grille from the bottom grille. They will only fit in one direction correctly.)	
4	Place a toggle nut on the end of each of the screws that were just installed in the grille.	
5	Set the top billet grille in the top of factory grille; be sure to place it in the center of the shell.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Repeat steps 3 - 6 for the bottom grille	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!