



# PATENT PRODUCT

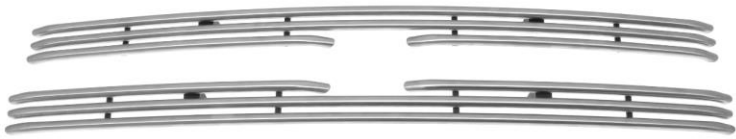
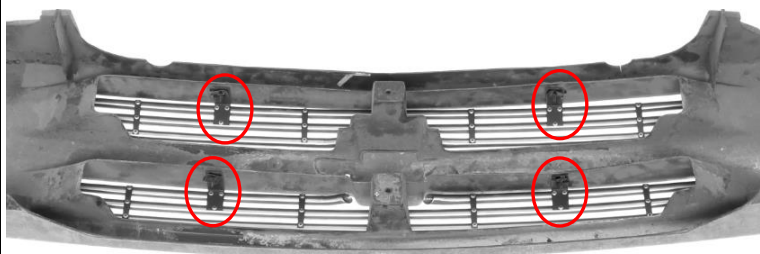
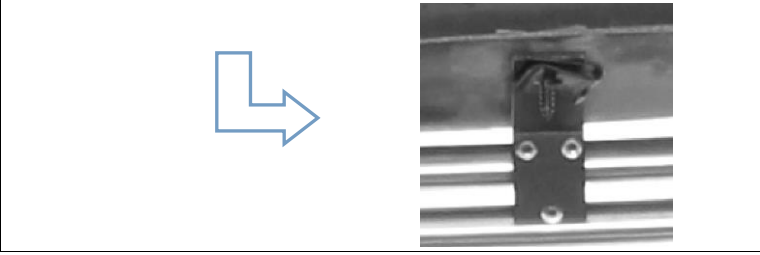

## Grille Installation Instruction

Rev. 180901

<b>Part#</b>	GR03TEG16C/J	<b>Application</b>	<b>For 1994-1997 Chevy S-10 Pickup / 1994-1997 Chevy Blazer Fit 2 Door Only</b>
--------------	--------------	--------------------	-------------------------------------------------------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	2	Stainless steel	3	Screws	4	8# × 3/4"
	2	U Clip Nut	4	8#				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Test fit the 2-piece grille into the grille shell. They are not interchangeable. You may need to take off the grille shell for more room to work from behind.	
4	Mark the location on the grille shell with the guidance of the holes on the grille. Drill 1/8" at each of the location.	
5	Attach the new billet grille onto the grille shell with the screws provided.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!