



PATENT PRODUCT

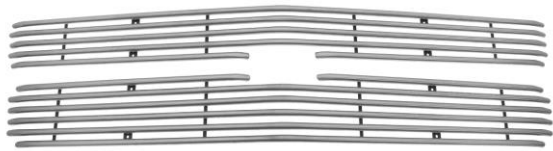
Grille Installation Instruction

Rev. 191201

| | | | | |
|--------------|--------------|--------------------|--|-------------------|
| Part# | GR03TEG74C&J | Application | <i>For 2007-2010 Chevy Silverado 3500 HD</i> <i>For 2007-2010 Chevy Silverado 2500 HD</i> | <i>Main Upper</i> |
|--------------|--------------|--------------------|--|-------------------|

| | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|-------------------|------|---------------------------|-----|-----------------|------|--------------|-----|-------------|
| Parts List | 1 | Tubular Grille | 2 | Stainless steel | 3 | U- Clip Nuts | 8 | 8# |
| | 2 | Truss Head Tapping Screws | 8 | 8#X1-1/4" | 4 | Flat Tab | 8 | |

Install Notes:
 Overlay
 Replacement
 Drill
 Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | N/A |
| 3 | Place one screw through each of the welded tabs on the billet grille. Place a U-clip nut over each of the holes on the tabs. | N/A |
| 4 | Where the screws come through the grille shell, place a tab in align with the screw and tighten. | N/A |
| 5 | Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center. DO NOT OVER TIGHTEN SCREWS. | N/A |
| 6 | Repeat steps 3 -5 for the bottom grille. | N/A |
| 7 | Installation completed. | N/A |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!