




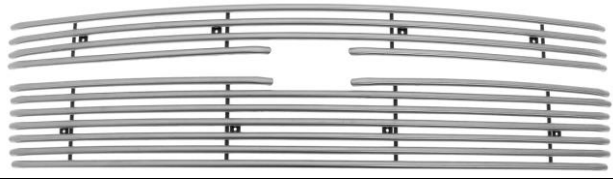

PATENT PRODUCT

Grille Installation Instruction

Rev. 191201

Part#	GR03TEI50C&J	Application	For 2014-2015 Chevy Silverado 1500 Main Upper					
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Tubular Grille	2	Stainless steel	4	Lock Nut	8	6-32
	2	Bolt	8	6-32x2"	5	Flat Tab	8	/
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.							
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the grille shell.							
4	Secure billet grille using the lock nuts and flat tabs from the back side of the grille shell.				 <p style="text-align: center; color: red;">8 Lock Nuts and 8 Flat Tabs</p>			
5	Make sure the billet grille is centered and tighten the fasteners.							
6	Reinstall the black plastic cover which was removed in step 2.							
7	Installation completed.							

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!