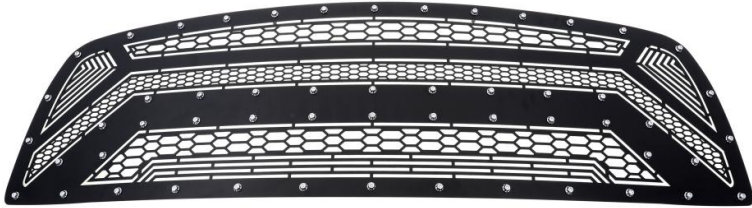
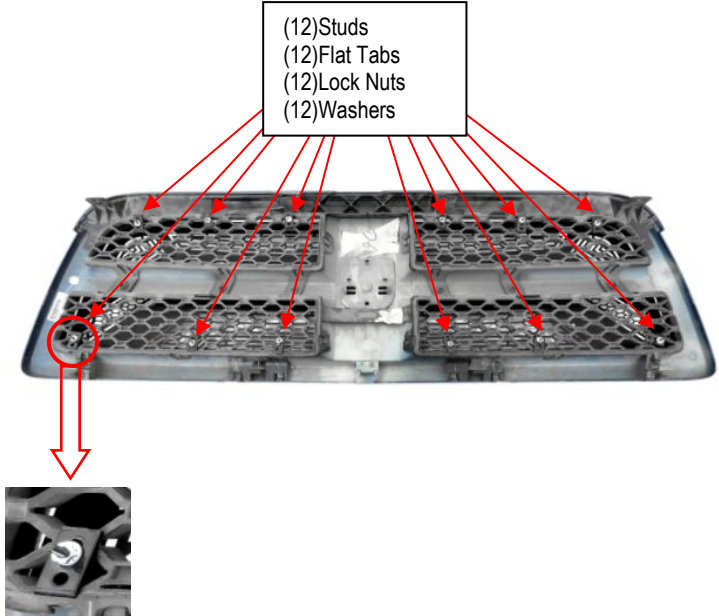



Part#	D45821N	Application	2009-2012 Dodge Ram 1500
-------	---------	-------------	--------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Rivet Grille	1	Stainless Steel	#4	Washers	12	M6
	#2	Studs	12	10-24X3 "	#5	Flat Tabs	12	
	#3	Lock Nuts	12	10-24				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Secure the stud to the threaded holes on the rear of the grille.	N/A
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	N/A
5	Secure grille using the flat tabs, washers and lock nuts from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	N/A

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	D45821N	Application	2009-2012 Dodge Ram 1500
7	Reinstall the black plastic cover which was removed in step 2.	N/A	
8	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!