

PATENT PRODUCT


Grille Installation Instruction


| | | | |
|--------------|-------------|--------------------|----------------------------|
| Part# | D65203C&J&S | Application | For 2019-UP Ram 1500 Rebel |
|--------------|-------------|--------------------|----------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|----------------------|-----|-----------------|------|-----------|-----|-------------|
| | #1 | Billet Grille | 1 | Stainless Steel | #4 | Clip Nuts | 8 | |
| | #2 | Self Trapping Screws | 6 | 8#×2.5" | #5 | Tabs | 2 | |
| | #3 | Self Trapping Screws | 2 | 8#×1.5" | | | | |

Install Notes: Overlay Replacement Drill Cut


| Step | Description | Illustration |
|------|-------------|--------------|
|------|-------------|--------------|

- | | | |
|---|---|---|
| 1 | Identify the grille & hardware with parts list. | |
| 2 | Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual. | |
| 3 | Install the Clip Nuts onto the Tabs as shown. Hold the billet grille against the OEM grille shell, center and mark (6) holes for drilling. Remove billet grille and drill holes according to your mark. |  |
| 4 | Thread a Self Trapping Screw in each nut welded to the grille. Secure billet grille using the Clip Nuts and Tabs from the back side of the grille shell. | |

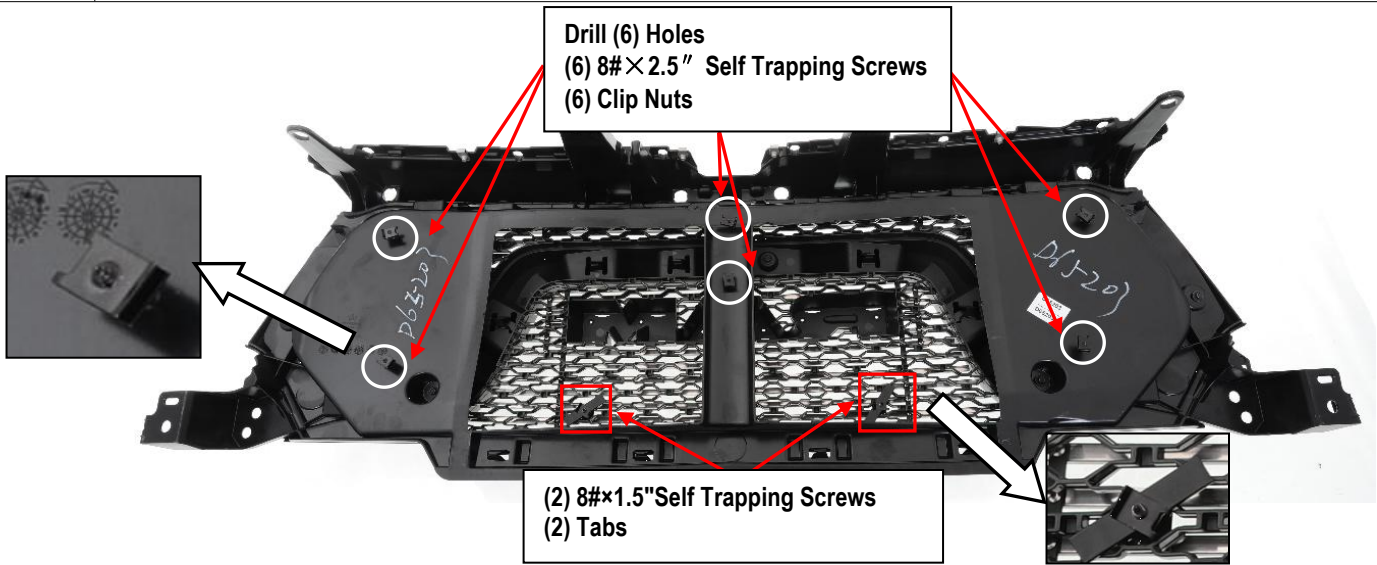

| | | |
|---|--|--|
| 5 | Make sure the insert is centered and tighten the hardware. | |
|---|--|--|

| | | |
|---|--|--|
| 6 | Reinstall the plastic shroud with the fasteners removed in Step 2. | |
|---|--|--|

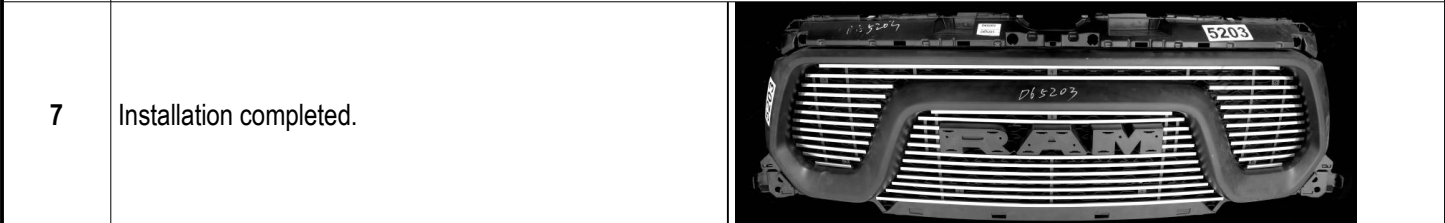

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!