

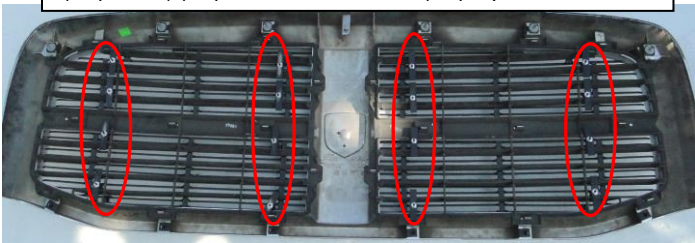






# PATENT PRODUCT

## Grille Installation Instruction

Rev. 181101

<b>Part#</b>	<b>GR04FEG19C/S/J</b>		<i>Application</i>	<b>For 2006-2008 Dodge Ram</b>				
<b>Parts List</b>	<b>Item</b>	<b>Part Name</b>	<b>QTY</b>	<b>Description</b>	<b>Item</b>	<b>Part Name</b>	<b>QTY</b>	<b>Description</b>
	1	Billet Grille	4	Stainless steel	4	Truss Head Screws	16	6#-32x1.5"
	2	Tabs	16		5	Nylon Lock Nuts	16	6-32
	3	Flat Washers	16					
<b>Install Notes:</b> Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
<b>Step</b>	<b>Description</b>				<b>illustration</b>			
1	Identify the grille & hardware with parts list.							
2	Remove the grille shell bolts in order to remove the grille from the hood.							
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.							
4	Secure billet grille using the tabs, washers and lock nuts from the back side of the OEM grille shell.		<div style="border: 1px solid black; padding: 2px; display: inline-block;">(16) Tabs, (16) Flat Washers and (16) Nylon Lock Nuts</div>   					
5	Make sure the billet grille is centered and tighten the fasteners.							
6	Reinstall the factory grille shell to the vehicle.							
7	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!