



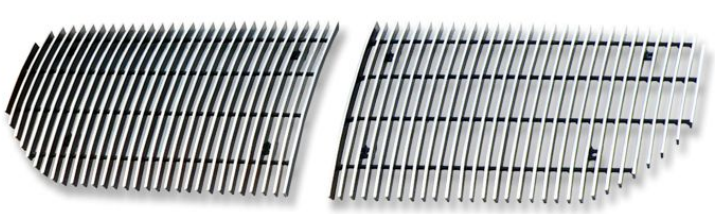
# Grille Installation Instruction

Rev. 150116

Part#	GR04FEJ40E	Application	05~07 Dodge Magnum – Vertical Billet Grille
-------	------------	-------------	---------------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Truss Head Screws	8	6-32 × 2"
	2	Flat Tabs	8		4	Flange Nuts	8	6-32

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Insert a screw in each tab welded to the insert. From the rear, place a flat tab on each screw. Now thread a nut on each screw.	N/A
4	Secure billet grille using the nuts from the back side of the OEM grille shell.	N/A
5	Make sure the insert are centered and tighten the hardware	N/A
6	Reinstall the black plastic cover which was removed in step 2.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!