


# PATENT PRODUCT


## Grille Installation Instruction

<b>Part#</b>	D66331C&J&S	<b>Application</b>	For 2013-2018 Ram 2500 / Ram 3500
--------------	-------------	--------------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	4	Stainless Steel	#3	Toggle Nuts	8	6#
	#2	Screws	8	6#-1.5"				

**Install Notes:** Overlay  Replacement  Drill  Cut

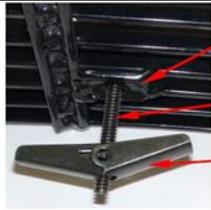Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Insert the screws into the weld tab hole from back side of the billet grille.	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;">                     picture for reference only; this is not actual grille                 </div>  <div style="margin-left: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Weld tab</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Screw</div> <div style="border: 1px solid black; padding: 2px;">Toggle nut</div> </div> </div>
4	Center the billet grille onto the OEM grille. Press & insert the toggle nuts on to the rear of the OEM grille through the gap.	

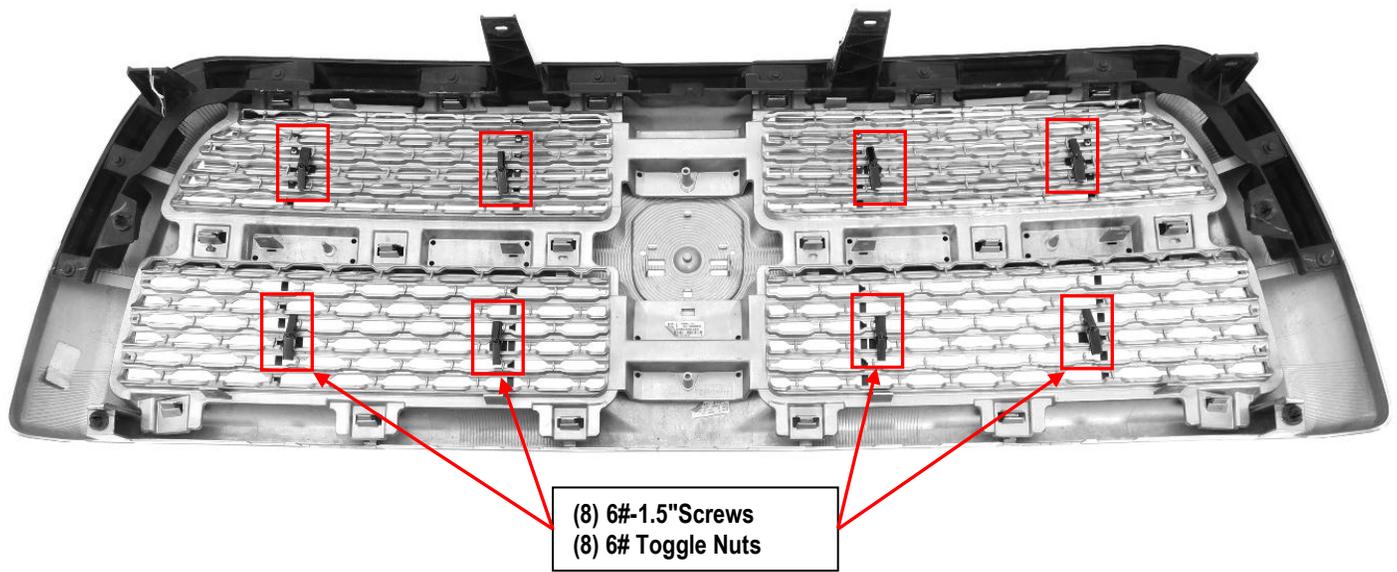

5	Make sure the insert is centered and tighten the hardware.
---	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



# PATENT PRODUCT Grille Installation Instruction

Rev. 20220301

<b>Part#</b>	D66331C&J&S	<b>Application</b>	For 2013-2018 Ram 2500 / Ram 3500
--------------	-------------	--------------------	-----------------------------------

<b>6</b>	Reinstall the plastic shroud with the fasteners removed in Step 2.	
<b>7</b>	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!