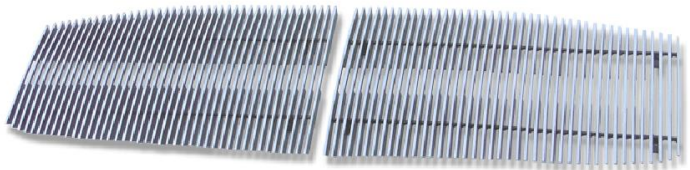


<b>Part#</b>	<b>GR04FFE36V/E</b>	<b>For 2004-2006 Dodge Durango</b>
--------------	---------------------	------------------------------------

<b>Parts List</b>	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	3	Flat Tabs	8	
	2	Screws	8	6-32x1.5"	4	Flange Nuts	8	6# -32

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop Hood, remove plastic shroud at the top and set fasteners aside.	
3	Optional: Using factory instructions, remove the entire front grille shell.	
4	Center the billet grille onto the OEM grille. Place screws through the welded aluminum tabs on the grille.	
5	Secure the grille using flat tabs and nuts from the back of OEM grille.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!