



# PATENT PRODUCT


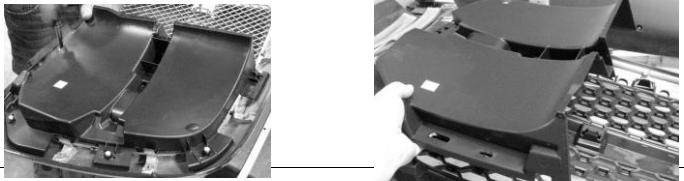
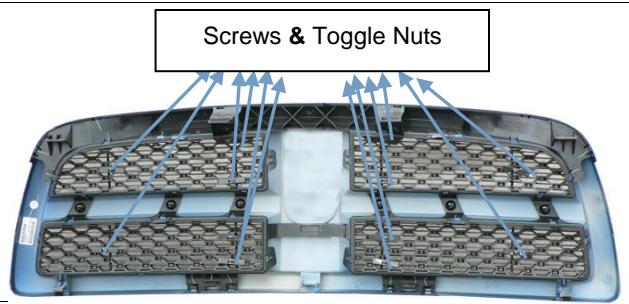
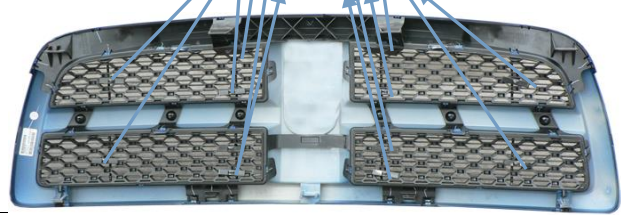

## Grille Installation Instruction

Rev. 180301

<b>Part#</b>	GR04FFF13S	<i>Application</i>	<b>For 2009-2012 Dodge Ram 1500 Honeycomb Style Only</b>					
--------------	------------	--------------------	----------------------------------------------------------	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Toggle Nut	12	6-32
	2	Truss Head Screws	12	6-32×1.5"				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Option: if your OEM grille has the black plastic cover (anti-freezer) as illustration, please remove this cover first before you install our grille, if not, just go to next step.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	Secure billet grille using the toggle nuts from the back side of the OEM grille shell.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">Screws &amp; Toggle Nuts</div> 
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
We are not responsible for any damage caused by the installation. Thank you for choosing our product!