
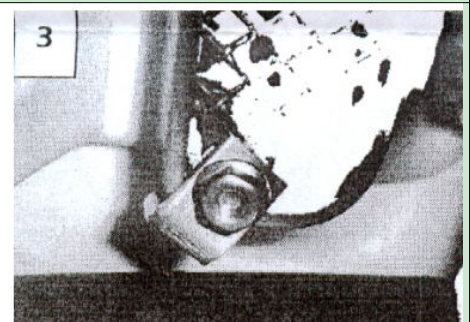


Part#	GR04GEA63T	Application	08~10 Dodge Magnum Low Bumper (Except SRT8)
-------	------------	-------------	---------------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	L Brackets	3	1/2" × 1/2"
	2	Kep Nuts	6	6-32	5	Studs	3	6-32 × 2"
	3	Washers	6					

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	Remove the two-piece plastic cover in front of the radiator support. Remove the clips holding the grille shell in place. Pull up to remove them (1). In each corner is a molded flap that secures the grille shell to the fenders. Pull up and separate the grille shell from the fender (2). This will allow access to the rear of the grille shell.	
3	Remove the factory grille inserts. Depress the clips to remove the inserts. Pull the inserts out of the bumper opening. There are 16 tabs that hold the factory inserts in place. Thread a stud in each nut welded to the grille. Center the lower grille shell in place.	
4	From behind; place an L-Bracket and kep nut on each stud (3). Center the grille and tighten.	
5	Clip the grille shell back into the fender mounts. Replace all of the clips and reinstall the motor covers.	
6	Installation completed!!!	

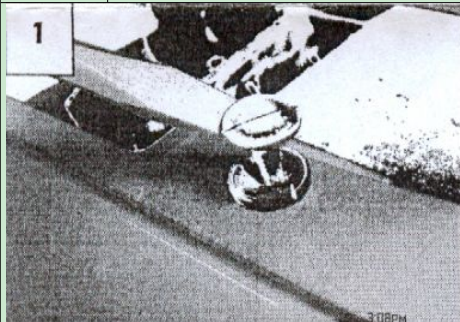

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!