




PATENT PRODUCT Grille Installation Instruction


Rev. 20210801


Part#	D75021K&S	Application	For 2019-UP Ram 1500 with sensor
--------------	-----------	--------------------	----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Hex Flange Nuts	6	#6
	#2	Studs	6	#6-32	#4	Flat Tabs	6	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the billet grille against the OEM grille shell, center and mark (6) holes for drilling. Remove billet grille and drill holes according to your mark.	
4	Thread a Stud in each nut welded to the grille. From the rear, place a Flat Tab on each Stud. Now thread a Hex Flange Nut on each Stud.	

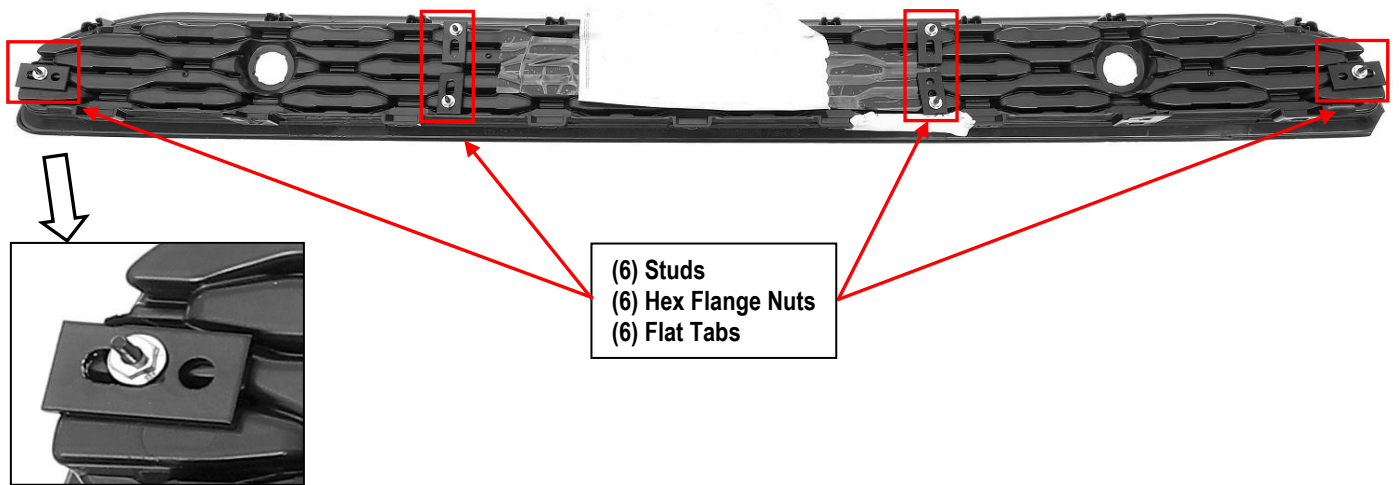

5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!