




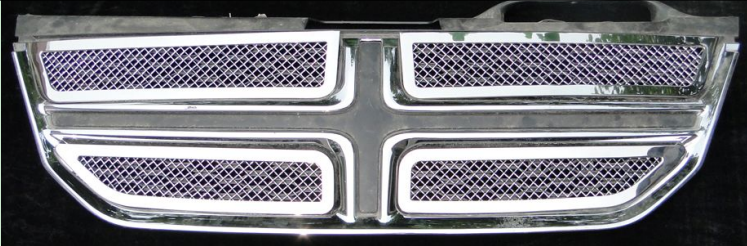
Grille Installation Instruction

Rev. 150116

Part#	GR04GFH76T	Application	2011-2012 Dodge Journey Main Upper
-------	------------	-------------	------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Screws	16	6-32 × 1 "
	2	Flat Tabs	16		4	K-Lock Nuts	16	6-32

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the grille from the box. Test fit the grille to make sure that it fits in the shell properly. Make sure the grille is centered.	N/A
3	Thread a screw in each nut welded to the grille. From the rear, place a tab on each screw. Now thread a nut on each screw.	N/A
4	Please remove the Dodge logo trademark from OEM shell if necessarily.	N/A
5	Secure billet grille using the k-lock nuts from the back side of the OEM grille shell.	N/A
6	Make sure the billet grille is centered and tighten the fasteners.but do not over-tighten.	N/A
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!