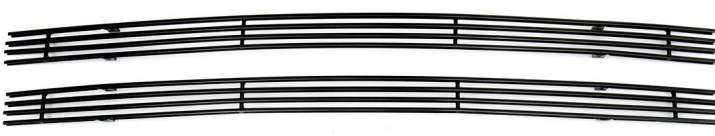


Part#	GR04HEJ36A	<i>Application</i>	05~07 Dodge Magnum Low Bumper (2 PCS) (Except SRT8)
--------------	------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	2	Aluminum	3	Screws	8	8×3/4"
	2	U-Clip Nuts	8	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Identify the upper piece and the lower piece. Put the upper piece at location and test fit.	N/A
4	Mark the 4 locations where the billet grille tabs get in contact with the valance shell, and drill 4 1/8" holes at each of the 4 locations.	N/A
5	Put U-clip nuts onto the billet grille tabs, and install the grille into the valance shell. Use the screws to fasten the grille.	N/A
6	Install the lower piece by repeating step (4) to (5).	N/A
7	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	N/A
8	Reinstall the bumper valance onto your vehicle.	N/A
9	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!