


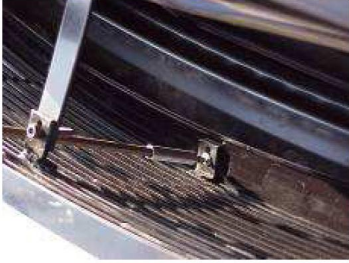


Part#	GR04HFF18H	<b>07~10 Dodge Avenger 4pc - Billet Grille</b>
-------	------------	--





Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Screw	4	8#x3/4"
	2	Allen Head Bolts	2	10#-24x1"	5	Speed Clips	4	8#
	3	Lock Nut	2	10-24#	6	Powder Coated Brackets	2	/

Install Notes: Overlay  Replacement  Drill  Cut

## Installation

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Using a screwdriver remove the plastic push clips that attach the upper portion of the factory grille shell to the vehicle and set aside as they will be reused later, <b>Figure 1</b> .	 Figure 1
3	Gently rock the factory grille shell forward and lift up to release the lower retaining clips. It may be necessary to reach below and release the clips by hand. Then remove the factory grille shell from the vehicle. <b>Figure 2</b>	 Figure 2
4	Center the billet grille into the factory opening. Make sure that the grille is lined up correctly with the head lights. On some models it may be necessary to drill the lower mounting holes but on most you will use the factory holes.	
5	Attach the lower portion of the billet grille to the vehicle using the supplied speed clips and #8 screws. <b>Figure 3</b>	 Figure 3

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR04HFF18H	07~10 Dodge Avenger 4pc - Billet Grille
6	Remove the factory bolts from the vehicles core support that are located directly in front of the upper tabs on the billet grille.	
7	Attach the powder coated brackets to the billet grille using the Allen head bolts and lock nuts. Do not fully tighten at this point. <b>Figure 4.</b>	 <p style="text-align: right;">Figure 4</p>
8	Use the factory bolts that were removed in step 6 to attach the powder coated brackets to the vehicle. <b>Figure 5. Figure 6</b> shows the upper brackets installed correctly.	 <p style="text-align: right;">Figure 5</p>  <p style="text-align: right;">Figure 6</p>
9	Adjust the upper portion of the billet grille to properly fit the vehicle and secure all hardware.	
10	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!