




Crilla Installation Instruction

AUI	TO PARTS SPECIALIS	r INC.	Griii	e installatio	n ins	truction	Rev	v. 180901
Part#	GR04HFG32A/H Application For 2009-2010 Dodge Ram 1500 / 1500			011-20	012 Ram			
	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts Lis	t 1	Billet Grille	1	Aluminum	3	Screws	8	#8×3/4"
	2	Pop Rivets	2		4	Flat Nut Plates	8	8#
Install No	otes: O	verlay × F	Replacer	ment V D	rill	√ Cut √		
Step	Description					illustration		
	Identify the grille & hardware with parts list.							
2	Remove the 6 clips on the radiator cover with a flat head screwdriver by prying them up until they pop. (Fig 1)							
3	Remove the 4 bolts on the top of the grille shell that attach the shell to the radiator support. (Fig 2)							
	Once you have the top of the grille shell loose you need to pull the bottom corners of the grille shell straight out from the vehicle until the clips holding the lower part of the grille pop loose. Do not force the grille, if you need							

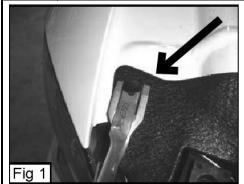

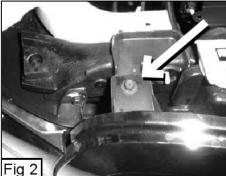

to you can reach down behind the lower portion of the grille and pop the tabs out with your hand. (Fig 3)

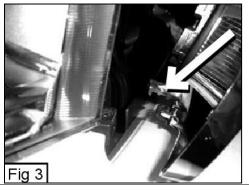

- Once you have the grille shell off of the vehicle apply masking tape over the front of the grille shell to prevent 5 any scratches.
- Now you are ready to separate the grille shell, the grille shell consists of a front part and a back part. Turn the grille shell face down on a work table so you are looking at the back side of the grille shell. The back part of the 6 grille shell has tabs that hold it into the front part. Unlock these tabs with a flathead screwdriver. Make sure you have them all unlocked. (Fig 4)
- 7 After all of the tabs are unlocked pry the 2 halves of the grille shell apart using a flathead screwdriver. (Fig 5)
- The horizontal and vertical bars will now be cut out of the front part of the grille shell. Use a jigsaw and cut the 8 bars leaving approximately 3/8" of material. (Fig 6)

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Grille Installation Instruction

Rev. 180901

Part#	GR04HFG32A/H	Application	For 2009-2010 Dodge Ram 1500 /2011-2012 Ram 1500		
Fig 4		Fig 5	Fig 6		
9	Use a sanding wheel to smooth the areas where you cut out the bars. Leave about 1/4" of material where the cuts were made. (Fig 7)				
10	Use a black marker to c	over up the cut a	areas. (Fig 8)		
11	Set the front part of the grille shell aside. Now take the back part of the grille shell, you will need to cut several parts front it. Using a grinding wheel cut be outside portion of the frame from the inside portion. Cut along the highlighted areas seen below. You will be using the 3 pieces that were cut from the outside. (Fig 9). Use a sanding wheel to smooth the outside frame parts where the cuts were made. (Fig 10)				
12			of the grille shell will now be installed into the front of the grille shell. the grille shell from the back using the factory latches. (Fig 11)		
Fi	97	Fig 8	Fig 10		
Fig			Fig 11		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!





Grille Installation Instruction

Rev. 180901

Part#	GR04HFG32A/H	Application	For 2009-2010 Dodge Ram 1500 /2011-2012 Ram 1500		
13	The 2 lower parts that were cut will be installed next. Install them on the corresponding side of the grille shell and snap the latches. (Fig 12)				
14	The 2 lower parts have a wide section that needs to be riveted to the grille shell. Drill a hole through the grille shell and the cut part and install a pop rivet to secure the 2 pieces. (Fig 13)				
15	Next take the assembly and turn it over on the bench. Put the billet grille into the assembly. (Fig 14). Center the billet grille in the grille shell.				




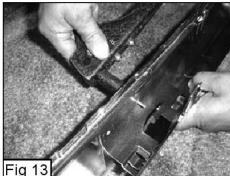


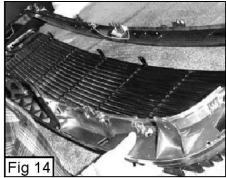

Make sure the front of the billet grille and the grille shell are flush. Use a couple of sets of vise grips to hold the billet grille secure. Clamp the vise grips on the tabs of the billet grille and the inner grille shell frame. Drill a hole through the tab on the billet grille and the inner part of the grille shell frame. (Fig 15)

Use 8 screws and a nut plate to secure the billet grille to the grille shell frame. Repeat this step on all 8 of the tabs on the billet grille. (Fig 16) The 4 screws in the top of the grille shell will install from the center of the shell through the tabs on the billet grille and then through the grille shell and the nut plate. The 4 screws on the bottom of the grille shell will install through the grille shell then the tabs on the billet grille and the nut plate. Install the screws this way to prevent interference when the hood is closed. (Fig 17)

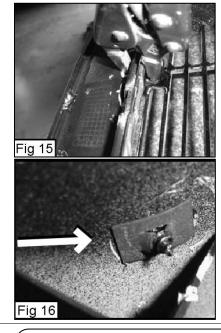

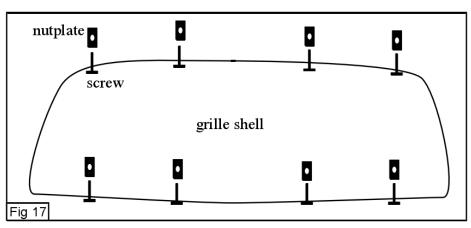

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Grille Installation Instruction

4	AUTO PARTS SPECIALIST INC.	Grille I	nstallation Instruction	Rev. 180901	
Part#	GR04HFG32A/H	Application	For 2009-2010 Dodge Ram 1500 1500	0 /2011-2012 Ram	
18	Reinstall the completed grille shell assembly onto the vehicle. Align the grille shell up to the vehicle. The lower tabs will be installed first. Reach down behind the grille shell to guide the lower tabs into the tab sockets and push the lower part of the grille inward until you feel the tabs lock in place. Next reinstall the 4 bolts holding the grille shell to the radiator support. Replace the radiator cover and the 6 clips.				
19	Installation completed!!!				

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!