



# PATENT PRODUCT


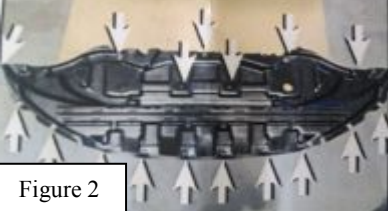


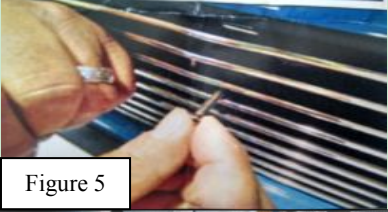
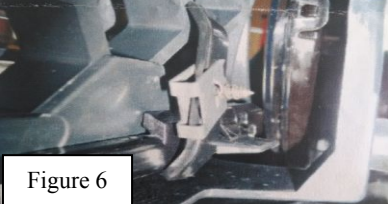
## Grille Installation Instruction

Rev. 141231

<b>Part#</b>	GR06FEI26A	<b>Application</b>	2013-2013 Ford Mustang GT Lower Bumper
--------------	------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Aluminum	3	Flange Bracket	2	
	2	U-Nut	2	6#-32	4	Screw	2	8#*2"

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Insert the U-Nut through the Flange Bracket (Have the wider hole on the U-Nut face towards you). (Figure.1)	 Figure 1
2	Remove 17 Screws and Bolts from underneath the Bumper Cover.(Figure.2)	 Figure 2
3	Remove the Bumper Cover .(Figure.3)	 Figure 3
4	Place Billet Grille into the Factory Bumper Grille. (Figure.4)	 Figure 4
5	Insert the Screws through the Brackets that are on The Billet Grille. (Figure.5)	 Figure 5
6	From Behind the Factory Bumper, Place the Flange Bracket through the screws and Thread in.the Factory Bumper, Place the Flange Bracket through the Screws and Thread in. ( Flange bracket hooks must face the Grille so it latches.) (Figure 6)	 Figure 6

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!