



PATENT PRODUCT


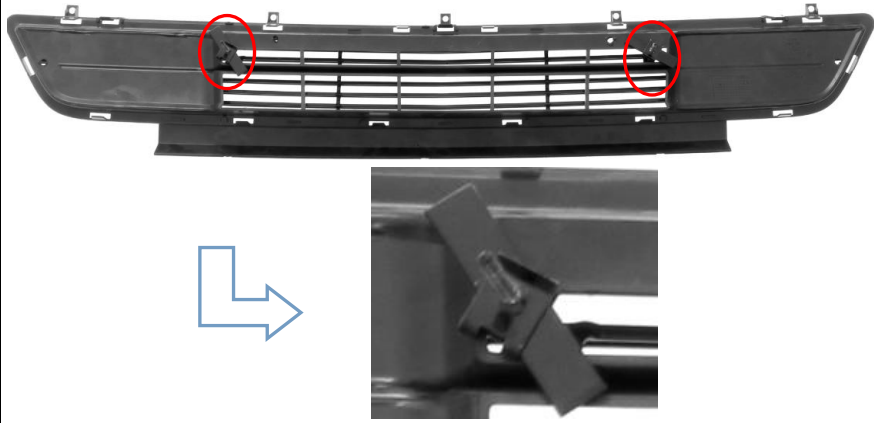

Grille Installation Instruction

Rev. 190401

Part#	GR06FFD03 C/S/J	Application	For 2015-2017 Ford Mustang Base V6 /2015-2017 Ford Mustang Ecoboost V6
--------------	--------------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	Stainless steel	3	Screws	2	8# X 3"
	2	U-Clip Nuts	2	8#	4	Flat tabs	2	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Hold the grille against the OEM grille shell, and make sure that it is centered. Place screws through welded aluminum tabs on front of the grille.	
4	Secure the grille using the flat tabs and U-Clip nut from the back side of the OEM grille shell.	
5	Make sure the grille is centered and tighten the fasteners. But not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!