
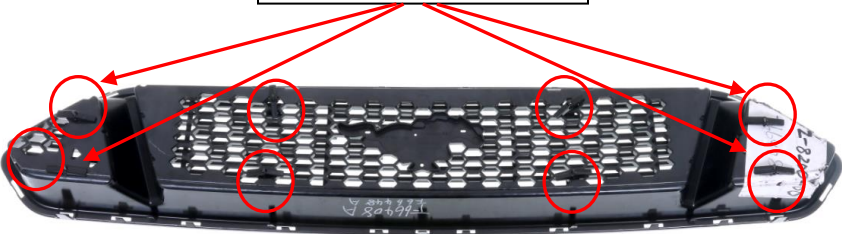




| | | | |
|--------------|--------------|--------------------|---|
| Part# | GR06FFD48S/J | Application | For 2018-2019 Ford Mustang Only for V8 GT models with logo show |
|--------------|--------------|--------------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-----------------|------|-----------|-----|-------------|
| | 1 | Billet Grille | 3 | Stainless steel | 3 | Screws | 8 | 6-32X1" |
| | 2 | Toggle Nuts | 8 | 6-32 | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step# | Description | illustration |
|-------|---|---|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Hold the billet grille against the OEM grille shell, center and mark holes for drilling. Remove billet grille and drill holes according to your mark. | |
| 4 | Center the grille into the opening of the factory grille shell. Place screws through the welded aluminum tabs on the front of the grille. Be sure the screws are through the OEM grille shell. | |
| 5 | Secure the grille using the toggle nut from the back side of the OEM grille shell. | <div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Mark and drill 4 holes</div>  </div> <div style="text-align: center; margin-top: 10px;">  </div> |
| 6 | Make sure the billet grille is centered and tighten the fasteners. | |
| 7 | Reinstall the black plastic cover which was removed in step 2. | |
| 8 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!