

PATENT PRODUCT

PN: GR06FFF59A

• 08- current Ford Econoline Van/E-Series

Hardware

4 – 0.138”X1” Bolts 4—6# Nuts 4 – 6# Flat Washers 2 – L Shape Brackets

• NOTE: Instruction for billet grille

- (1) Open the hood to allow access to the rear of the bumper. Test fit the billet insert into the factory bumper opening. Use 2 bolts on car to fasten 2 L shape brackets. Figure 1 is showing the location of the brackets.

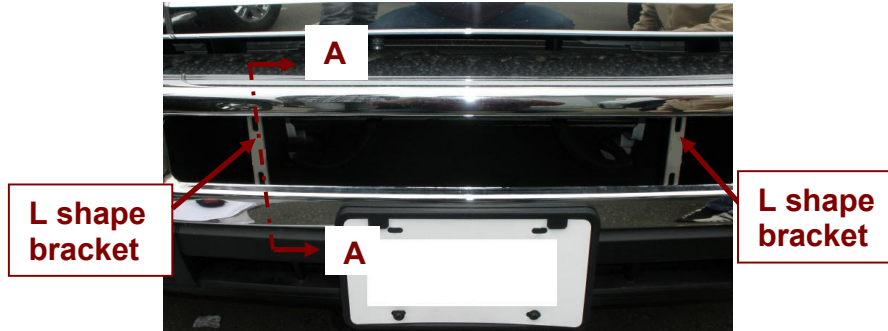


Figure 1

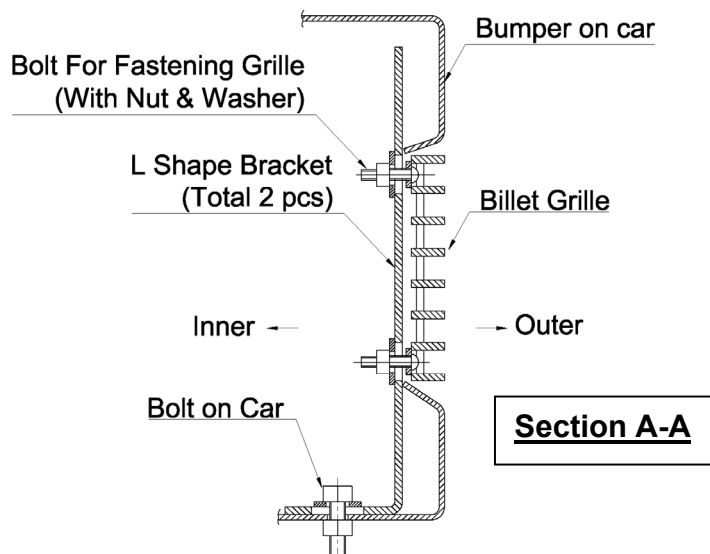


Figure 2

- (2) Note the 4 tabs welded on the rear of the billet grille. Fasten the grille to the L brackets through the 4 tabs with bolts, washers & nuts, see figure 2. Be sure the grille is centered and tighten but do not over-tighten the hardware.

Installation is now complete!!!!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!