



# PATENT PRODUCT


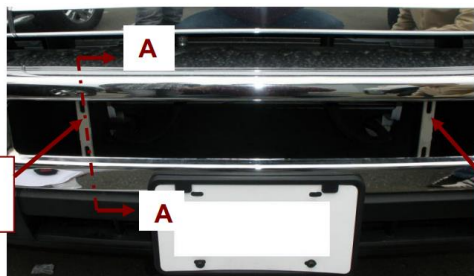
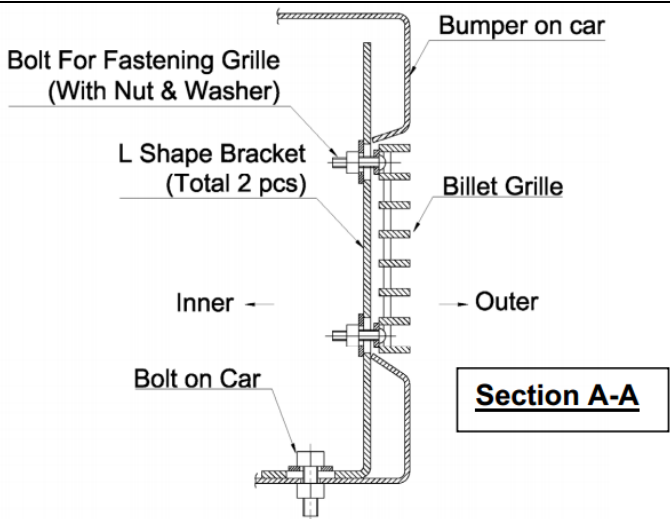
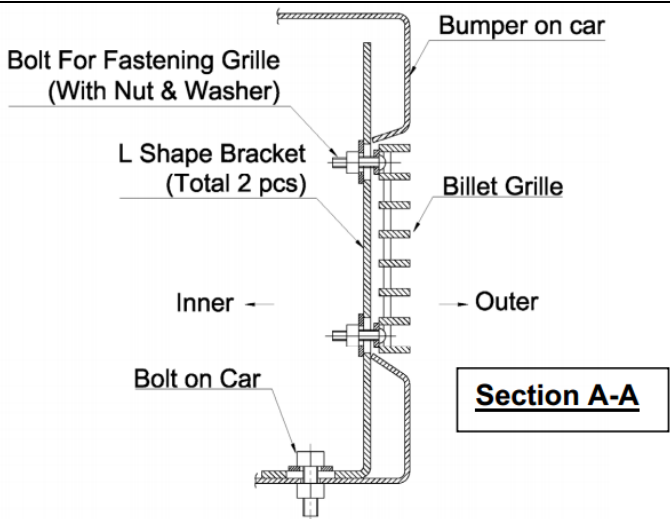
## Grille Installation Instruction

Rev. 190501

<b>Part#</b>	GR06FFF59 C/J/S	<b>Application</b>	<b>For 2008-2014 Ford Econoline /2008-2014 Ford E-Series Passenger</b>
--------------	--------------------	--------------------	--

<b>Parts List</b>	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	4	Flat Washers	4	6#
	2	Bolts	4	6# x 1 "	5	L Shape Brackets	2	
	3	Nuts	4	6#				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the bumper.	
3	Test fit the billet insert into the factory bumper opening.	
4	Use 2 bolts on car to fasten 2 L shape brackets.	
5	Note the 4 tabs welded on the rear of the billet grille. Fasten the grille to the L brackets through the 4 tabs with bolts, washers & nuts, see figure 2.	 <p style="text-align: center;"><b>Figure 1</b></p>
6	Be sure the grille is centered and tighten but do not over-tighten the hardware.	 <p style="text-align: center;"><b>Figure 2</b></p>
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!