



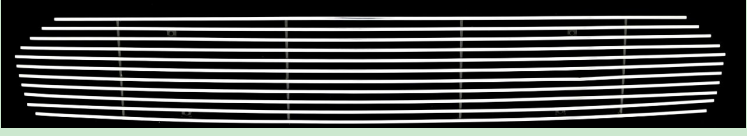
# Grille Installation Instruction

Rev. 150116

|       |            |             |                                                   |
|-------|------------|-------------|---------------------------------------------------|
| Part# | GR06FFF63A | Application | 09-10 Ford Focus Coupe – Low Bumper Billet Grille |
|-------|------------|-------------|---------------------------------------------------|

| Parts List | Item | Part Name     | QTY | Description | Item | Part Name         | QTY | Description |
|------------|------|---------------|-----|-------------|------|-------------------|-----|-------------|
|            | 1    | Billet Grille | 1   | Aluminum    | 3    | Truss Head Screws | 4   | 6-32 × 2"   |
|            | 2    | Toggle Nuts   | 4   | 6#          |      |                   |     |             |

Install Notes: Overlay  Replacement  Drill  Cut

| Step | Description                                                                                                                                                                     | illustration                                                                       |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1    | Identify the grille & hardware with parts list.                                                                                                                                 |  |
| 2    | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.                             | N/A                                                                                |
| 3    | Place screws through the welded aluminum tabs on the grille, and attach a toggle nut on the end of each bolt.                                                                   | N/A                                                                                |
| 4    | Hold the billet insert up to the opening of the factory shell, make sure that it is centered in the grille shell, and push in the toggle nut past the factory grille honeycomb. | N/A                                                                                |
| 5    | Turn the toggle nut so that it is vertical, and tighten.                                                                                                                        | N/A                                                                                |
| 6    | Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.                                                                                     | N/A                                                                                |
| 7    | Reinstall the black plastic cover which was removed in step 2.                                                                                                                  | N/A                                                                                |
| 8    | Installation completed!!!                                                                                                                                                       | N/A                                                                                |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!