



PATENT PRODUCT

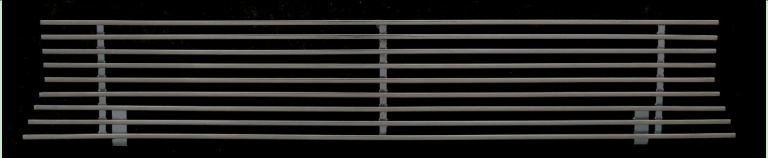
Grille Installation Instruction

Rev. 130701

Part#	GR06FFJ16A	Application	1999-2004 Ford Mustang Saleen Lower Bumper
--------------	------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	9 billets	3	Nut	2	M4
	2	Bolt	2	M4×20	4	Washer	2	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	N/A
4	Secure billet grille using the nuts and washers from the back side of the grille shell.	N/A
5	Make sure the billet grille is centered and tighten the fasteners.	N/A
6	Reinstall the black plastic cover which was removed in step 1.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!