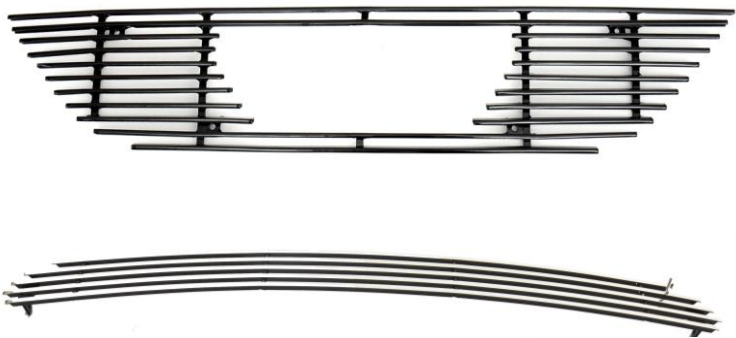


Part#	<b>GR06FGG34H</b>	Application	<b>For 1999-2004 Ford Mustang</b>
-------	-------------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	4	Screws	4	6-32x1.5"
	2	Tabs	4		5	Nuts	4	6#
	3	Counter Sunk Screws	4	8#x3/4"	6	Speed Clips	4	8#

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
5	Start from top piece. Set the billet grille in the factory shell; be sure to place it in the center of the shell. Place a screw in each of the welded tabs of the billet grille, place a tab with nut behind the grille shell in line with where the screw comes through. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.	
6	Move on to the bottom piece. Center the billet grille into the opening of the factory grille shell. You need mark and drill four holes. Secure the screw to the threaded holes on the front of the grille. Be sure the screws are through the OEM grille shell. Secure billet grille using the speed clip from the back side of the OEM grille shell.	
7	Make sure the billet grille is centered and tighten the fasteners.	
8	Reinstall the black plastic cover which was removed in step 2.	
9	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!!