
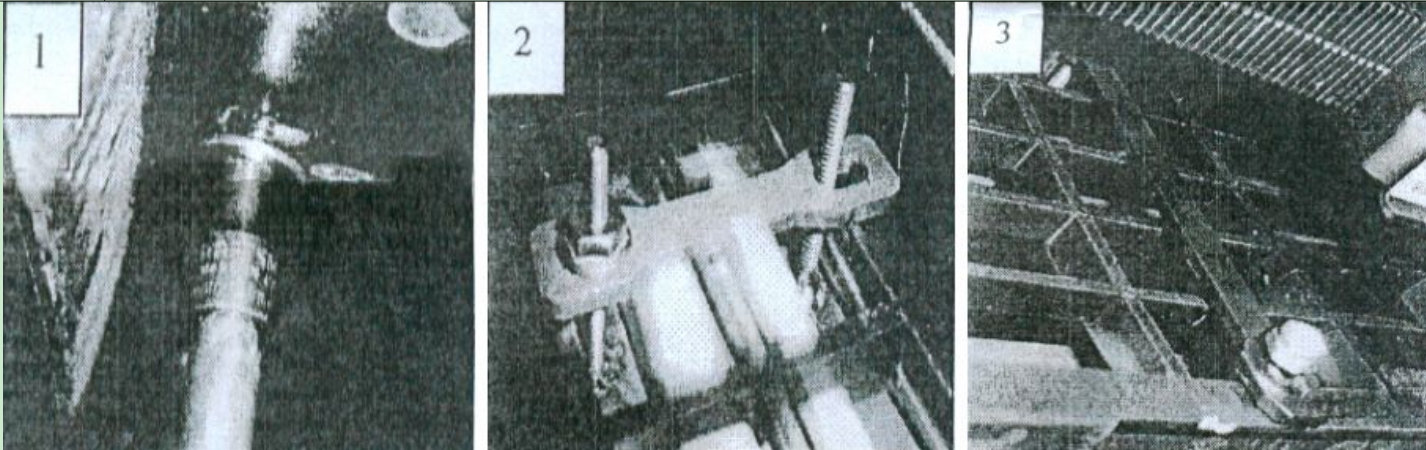


Part#	GR06GEB21T	Application	09~10 Ford Flex – Low Bumper Stainless Steel Mesh Grille
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	4	Studs	8	6-32×1.5"
	2	2-Hole Tabs	2		5	Washers	8	
	3	2-Hole Tabs	2		6	Kep Nuts	8	6-32

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the grille to the vehicles factory openings. You are now ready for the install:	
3	Remove the lower motor cover by removing the small screws and pop clips (1). This will allow access to the backside of the bumper.	
4	Install the upper bumper grille. Thread a stud in each nut welded to the grille. From the backside of the grille; place the smaller tab connecting each of the welded studs (2). Place a kep nut onto each stud. Repeat this on the other side. Making sure that the grille is centered into the bumper; tighten the hardware. Install the lower bumper grille. Thread a stud in each nut welded to the grille. From the backside of the grille place the long tab connecting each of the welded studs. Place a kep nut onto each stud (3). Making sure that the grille is centered into the bumper; tighten the hardware.	
		
5	Reinstall the factory lower motor cover, screws and pop clips to there factory locations.	
6	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!