




| | | | | | | | | |
|-------|------------|-------------|--|--|--|--|--|--|
| Part# | GR06GFC63S | Application | <i>For 2017-2019 Ford F-250/350/450 Without Front Camera</i> | | | | | |
|-------|------------|-------------|--|--|--|--|--|--|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------|-----|-------------|
| | 1 | Mesh Grille | 1 | Stainless steel | | | | |

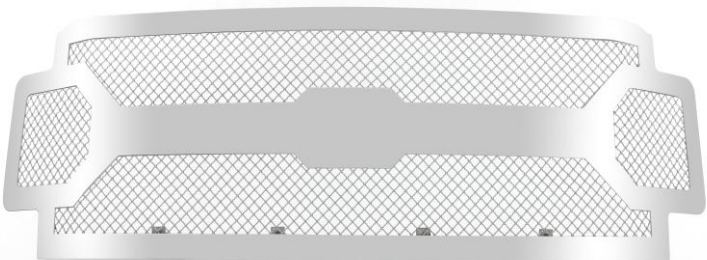


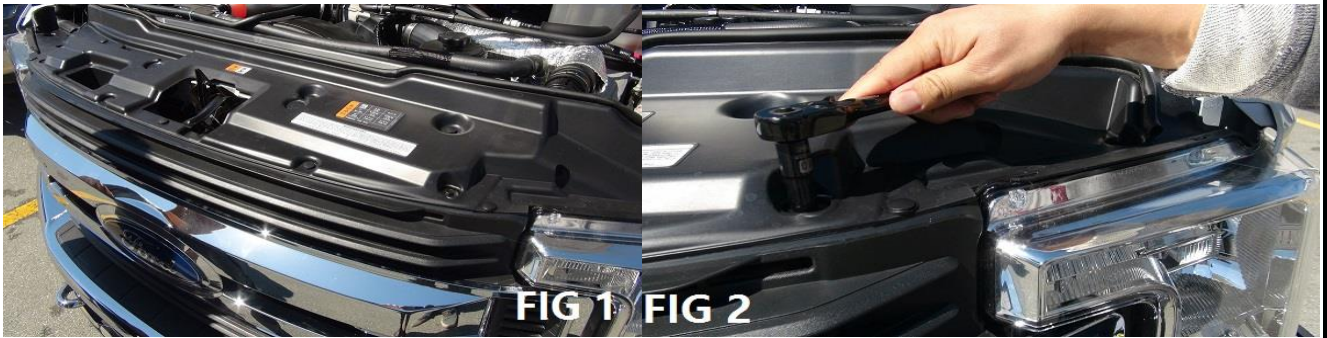

Install Notes: Overlay Replacement Drill Cut

| Step | Description | Illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. (For this product, use OEM factory grille hardware). |  |
| 2 | Turn off engine and chalk tires with stop block. Optional: (for vehicles with black plastic cover under hood) Open hood. | |
| 3 | Identify & locate plastic clips on top of plastic shroud and also (1) additional clip on each side located at the top of the headlight body panel cover. Carefully pry off to remove and then set aside for reinstallation later. | |
| 4 | Remove plastic shroud and then set aside for reinstallation later. | |

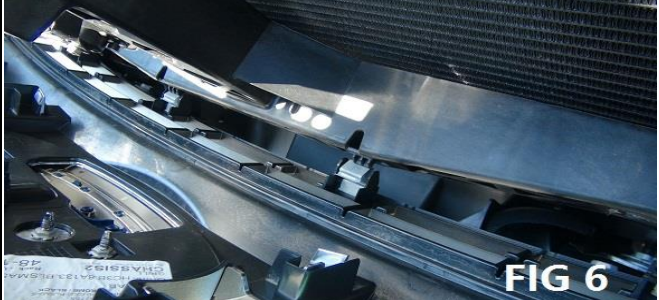

| | | |
|---|--|--|
| 5 | Use masking tape to cover OEM factory grille to avoid scratches when you install the grille; Slightly pull forward from top of the OEM factory grille (Fig 3). There are two clips (Fig 4) at the side of each corner. In order to remove the OEM grille shell, pull with more force at these two areas. |  |
|---|--|--|

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| Part# | GR06GFC63S | Application | <i>For 2017-2019 Ford F-250/350/450 Without Front Camera</i> |
|---|--|--|--|
| 6 | <p>There are 4 metal clips near the bottom of the OEM factory grille shell; use your screwdriver and push slightly to release it. The OEM factory grille should now be free and ready to be removed. Carefully place the grille on a soft cushioned surface.</p> | |  <p style="text-align: right;">FIG 6</p> |
| 7 | <p>Remove the metal clips from the OEM factory grille shell (Fig 7); those clips will be used on your new mesh rivet grille.</p> | |  <p style="text-align: right;">FIG 7</p> |
| 8 | <p>Install those metal clips on the new mesh rivet grille. (Fig 8, Fig 9)</p> | | |
|  <p style="text-align: right;">FIG 8</p> | |  <p style="text-align: right;">FIG 9</p> | |
| 9 | <p>Carefully put back into place the headlight plastic body panel around the head lamp area making sure to align with tab fasteners and then firmly press into place. Use the bolts to mount and secure the panel on the inside wheel well lip.</p> <p>On each side of the grille at the top corners, reinsert the plastic tabs.</p> | |  <p style="text-align: right;">FIG 10</p> |
| 10 | <p>At this point you want to look over your work and examine the gap alignments around all edges and in between the new grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can loosen the top mounts and shift side to side even gaps.</p> | | |
| 11 | <p>Installation completed!!!</p> | | |

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!