

Part#	GR06GFG87T	Application	2010 Ford Fusion – Low Bumper Stainless Steel Mesh Grille
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	K-Lock Nuts	10	6-32
	2	Studs	10	6-32 × 1 1/2"	4	Black Washers	10	

Install Notes: Overlay



Replacement






Drill



Cut

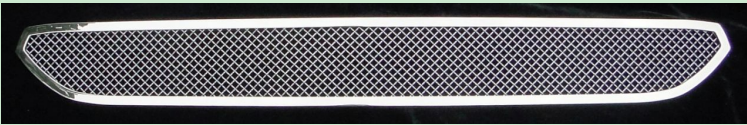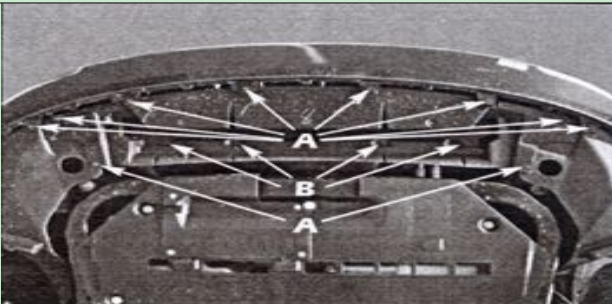

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Raise the vehicle to gain access to the lower center removable panel. Remove the 7mm hex screws (A) and the plastic push pins (B), then remove the panel from underneath the vehicle. This will allow access for the lower mesh grille mounting hardware.	
3	Apply masking tape around the lower factory grille opening to protect the finish during the dry-fitting portion of the lower grille installation. Thread a stud in each nut welded to the grille. Align the lower mesh surround into the factory grille opening, making sure it is centered. Push firmly enough to indent the factory grille at the outer stud locations and remove the surround.	
4	Use a 5/16" drill bit to drill through the marks made in the previous step. Slot the holes from side to side for left to right grille adjustments.	
5	Install the lower mesh into the lower factory grille opening, making sure the mesh is tight against the factory lower grille insert.	
6	Install the supplied black washers and 6-32 k-lock nuts onto the studs and tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!