



PATENT PRODUCT

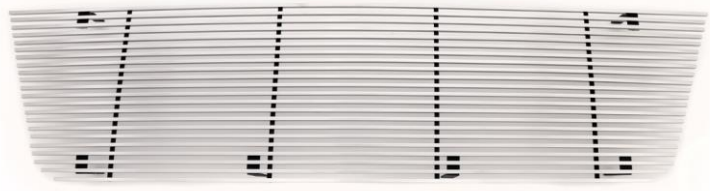
Grille Installation Instruction

Rev. 190101

| | | | |
|--------------|----------------------------|--------------------|---|
| Part# | GR06HEC37 C/S/J | <i>Application</i> | For 1992-2007 Ford Econoline Van (22 Bars) |
|--------------|----------------------------|--------------------|---|

| | Item | Part Name | QTY | Description |
|-------------------|------|---------------------------|-----|-----------------|
| Parts List | 1 | Billet Grille | 1 | Stainless steel |
| | 2 | Truss Head Tapping Screws | 6 | 8×3/4" |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Place the billet insert into the opening. Align the insert so it is flush with the headlight and lower panel. | |
| 4 | Mark and drill the four lower mounting brackets and fasten to the header panel using the screws provided. Pull the top of the billet grille in and align with the headlights. Drill and fasten the two top brackets to the header. | |
| 5 | Make sure the billet grille is centered and tighten the fasteners. | |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! | |

****THIS BILLET GRILLE REPLACES THE ENTIRE GRILLE SHELL.** After installations; Opening the hood will require the use of a long screw driver or similar tool to insert in between the bars of the billet grille to release the hood latch.

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!