
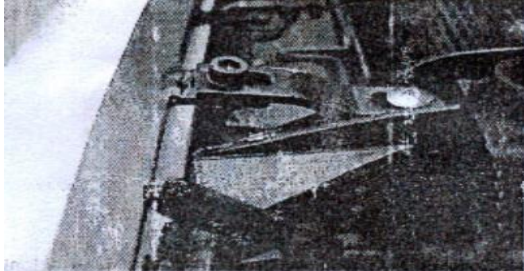
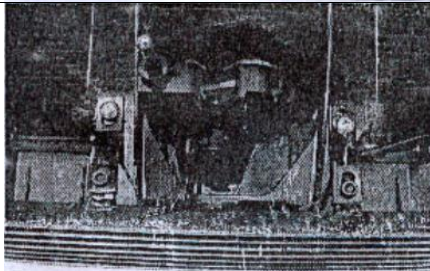
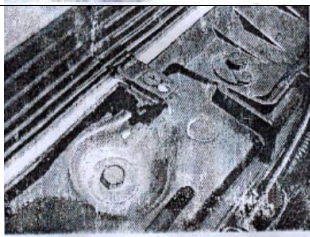


Part#	GR06HEG61C	Application	For 2000-2004 Ford Focus					
-------	------------	-------------	--------------------------	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	5	Button Head Screws	2	10-24×1"
	2	Z Brackets	2		6	Truss Head Tapping Screws	2	8×3/4"
	3	Kep Nuts	2	10-24	7	Truss Head Tapping Screws	2	8×5/8"
	4	U-Clip Nuts	4	8				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Attach the two brackets to the two upper tabs of the billet grille. Leave hardware loose to make adjustments later. See figure 1.	 Figure 1
4	Place grille into opening of vehicle, center the grille and line up the brackets as seen in figure 2.	 Figure 2
5	Mark and drill your holes to secure the extension brackets. Next, line up the bottom portion of the grille then mark and drill your holes for the lower tabs. See figure 3.	 Figure 3
6	Close the hood of the vehicle to check that the grille is centered and is even with the hood line. If everything is ok then open the hood back up, and tighten down all hardware.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!