

Part#	<b>GR06HFJ09A/H</b>	Application	<b>For 1999-2004 Ford Mustang</b>
-------	---------------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum				

Install Notes: Overlay  Replacement  Drill  Cut


Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the upper grille clips(Fig 1).	
3	Pull forward on the upper grille in order to get access to the bolts on the bottom side(Fig 2).	
4	Remove the bolts on the bottom of the upper grille shown here(Fig 3).	



Fig 1



Fig 2

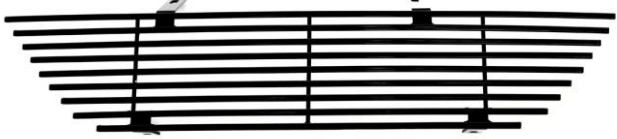

Fig 3

5	Using a small ratchet works fine it's a bit of a tight spot(Fig 4).
6	Remove upper grille from vehicle(Fig 5).
7	Remove the "U" clips on the bottom of the factory grille we will be needing these for the new grille(Fig 6).



Fig 4



Fig 5

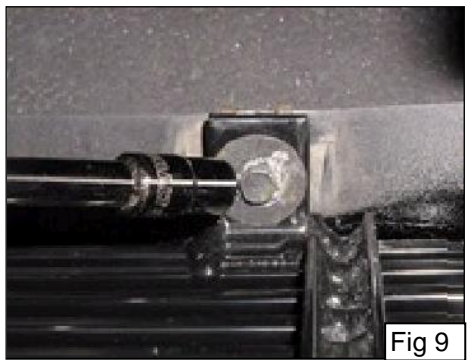


Fig 6

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

<b>Part#</b>	<b>GR06HFJ09A/H</b>	<b>Application</b>	<b>For 1999-2004 Ford Mustang</b>
--------------	---------------------	--------------------	-----------------------------------

8	Slip the "U" nuts onto the screw holes of the bumper cover as shown(Fig 7).
9	Place the other "U" clips onto the core support panel as shown.(Fig 8).
10	Place new grille insert in place and fasten the lower bolts(Fig 9).



11	Fasten the upper grille screws(Fig 10).	
----	---	--

12	Installation completed!!!	
----	---------------------------	--

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!