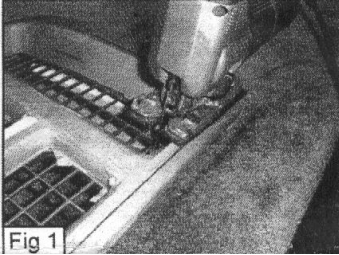
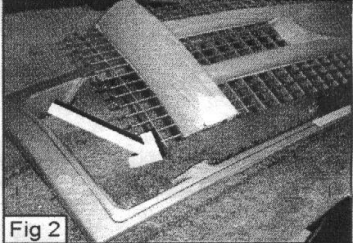
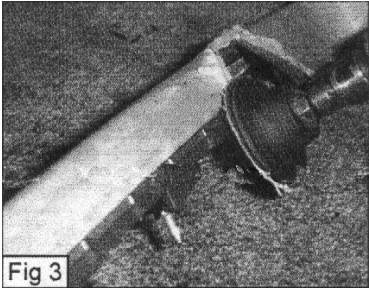
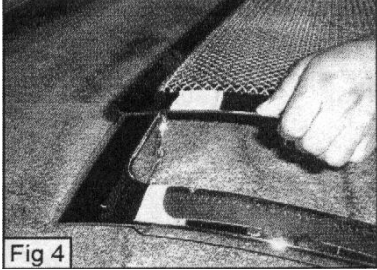


Part#	GR06LFF32H	Application	2009~2011 Ford F-150 All Model
-------	------------	-------------	--------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Flat Tab	8	/
	2	Stud	14	10-24×2"	5	J Bracket	6	/
	3	Lock Nut	14	10-24	6	/	/	/

Install Notes: Overlay  Replacement  Drill  Cut


Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	The first step of the installation is to remove the factory grille shell from the vehicle. There are a dozen 10mm nuts holding the grille shell to the bottom of the hood and a black bracket at the lower part of the grille shell that need to be removed.	
3	Once you have the grille shell removed use masking tape to cover the front of it to prevent any scratches during installation. The center of the grille shell needs to be removed. Cut across the to vertical bars near the sides of the grille shell with a jigsaw. (Fig 1) Leave a little (1/2") of the material on the vertical bar. (Fig 2). Cut the cross hatch material also, cutting closer to the grille shell. The entire center portion of the grille shell will come out in one piece. (Fig 2)	 
4	Next use the die grinder to smooth out where the cuts were made. Go around the entire inside of the grille shell and grind it smooth. (Fig 3)	
5	Once the inside of the grille shell is smooth, lay the mesh grille into the opening. (Fig 4)	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR06LFF32H	Application	2009~2011 Ford F-150 All Model
-------	------------	-------------	--------------------------------

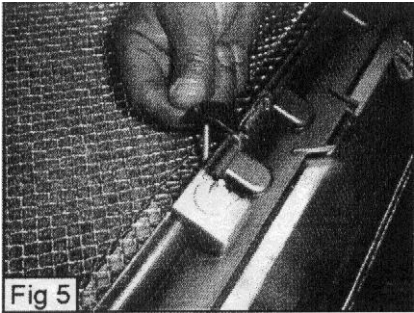6	<p>While holding the mesh grille in the grille shell, turn the grille over so you can work on the backside. Thread a stud in each nut welded to the grille. The 6 threaded studs on the side of the mesh grille will use the 6 "J" brackets. Slide a "J" bracket over the threaded stud and hook it over the inside edge of the grille shell. Put a 6-32 kept nut on top of the "J" bracket to secure it. Tighten the nut with a 8mm socket. The 8 threaded studs on the top and bottom of the mesh grille use the 8 flange brackets. Slide the flange brackets over the threaded studs and latch the over the inside edge of the grille shell. Use a 6-32 kept nut to secure the flange brackets. Tighten with a 8mm socket (Fig 5). Reinstall the grille on the vehicle. Installation complete.</p>	
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!