



PATENT PRODUCT Grille Installation Instruction

Rev. 20230101

Part#	G65621C&J&S	Application	For 2015-2020 GMC Canyon
--------------	-------------	--------------------	--------------------------


	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	#1	Billet Grille	1	Stainless Steel	#3	Clip Nuts	2	#8
	#2	Screws	2	#8X2"	#4	Flat tab	2	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
------	-------------	--------------

1	Identify the grille & hardware with parts list.	
---	---	--


2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
---	--	--

3	Install the Clip Nuts onto the tabs.(Fig1)	 <div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">FIG1</div>
---	--	--

4	Under bottom of car front end, the plastic protective skid plate is secured by 8 plastic push tabs. Carefully pry them out with a broad flat head screwdriver or firm plastic wedge spatula. The skid plate should now be able to hang down loosely allowing access to behind the front lower bumper opening.	
---	---	--

5	Place billet overlay into position. Fit into place and examine the gap alignments around all edges and in between the new T-REX Grille and the vehicle components and body lines.(Fig2)	
---	---	--

6	Use a Phillips Head screwdriver to tighten screws and secure grille overlay into place. You may reach underneath and fit rear bracket to grab and secure appropriately while tightening screw form the front. It may help to use an extra long flat head screwdriver to hold bracket in place while tightening down the screws to prop it into position.(Fig3)	
---	--	--

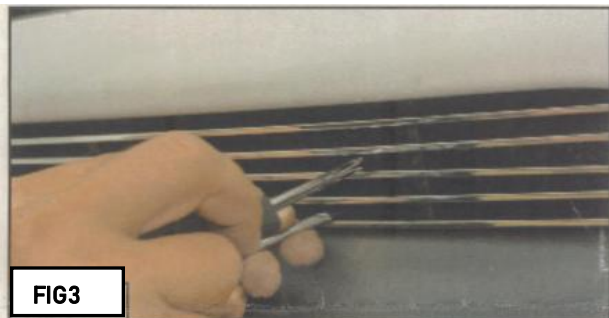

7	At this point you want to look over your work and examine the gap alignments around all edges and in between the new T-REX Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can loosen the hardware mounts and shift side to side or up & down to achieve proper look. (Figs 4-5)	
---	--	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



PATENT PRODUCT Grille Installation Instruction

Rev. 20230101

Part#	G65621C&J&S	Application	For 2015-2020 GMC Canyon
--------------	-------------	--------------------	--------------------------



8	Reinstall the plastic shroud with the fasteners removed in Step 2.
9	Installation completed.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!